


! Please do not keep emergency keys in your safe!



Schematic drawing of case

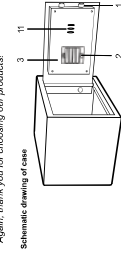

1. Bolts
2. Reset Button
3. Battery Compartment
4. Knob (Master Key)
5. Emergency Lock Cover
6. Green Light
7. Red Light
8. Yellow Light
9. Confirming button
10. Power supply: 4 X AA batteries (include)
11. Storage hooks

⚠ CAUTION: All drawings in this manual have been prepared based on the EA. The exterior design or component positions of other models may be different from what is indicated in the drawings, while the operation is the same.

  - Fix the safe in the place which is not easy to move.
- Drill holes for expansion bolts (or clamping screws) in the right place.
- Turn the expansion bolts counter clockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten all screws.



OPENING YOUR SAFE FOR THE FIRST TIME

⚠ CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

INSERTING THE BATTERIES

- Open the door.
 - Insert 4 X AA batteries into the battery compartment.
 - Under normal condition, if both of the red and the green lights are on at the same time, it means the voltage is low and you should insert new batteries.
- ⚠ CAUTION:** Replace 4 fresh batteries by lining them up in a manner as indicated by the "+" and "-" signs. When outage for longer than thirty minutes, you should reset the user's e - code.

OPENING DOOR

- Input your user's code (3 to 8 digits), each pressing results one buzzer beep and one yellow light flashes.
 - Press "A" (C #) or "B" (E / *) button, the green light will be on.
 - Rotate the knob (master key) clockwise and pull outwards within 5 seconds, the door is opened.
- ⚠ CAUTION:** The user preset code "159". Please input the user code again if the yellow light flashes with three buzzer beeps.



CLOSING DOOR

- Turn the knob (master key) counter clockwise to close the door.

AUTOMATIC LOCK

- 3 continuously wrong entries will activate the warning beep for 20 seconds.
 - **If the door has not been opened with the password, the next 3 continuously wrong entries will activate the warning beep for 5 minutes.**
- ⚠ CAUTION:** The key pad would be disabled during the beeping. You can only stop the beeps by opening the safe with emergency key and power-cut by removing the battery.

SETTING THE USER CODE

- With the door open, press the reset button one, start setting code when the yellow lights go on.
- Input new code (3-8 digits), and press the "A" (C / #) or "B" (E / *) button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code.
- If the yellow light flashes with 3 buzzer beeps, which means the code changing is not effective, and you need to try again.

OPENING THE SAFE WITH THE EMERGENCY KEY

Upon first receipt of the safe, or either the electronic circuit malfunction or codes unknown. You could also use the emergency key to open the safe.

- Remove the cover of the emergency lock.
- Insert the emergency key, turn it counterclockwise, then turn the knob (master key) clockwise to open the door.



WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

2000

- The following information is for the use of the customer only. It is not intended to be used as a basis for any claim or action. The information is provided for your information only. It is not intended to be used as a basis for any claim or action. The information is provided for your information only. It is not intended to be used as a basis for any claim or action.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Structure of the model

WARRANTY CARD

[illegible]

This copy shall be cut along the dotted line and kept by the dealer

WARRANTY CARD

[illegible]