

Batch
Number: _____
Number: _____

DELI GROUP CO., LTD.

Delaware, United States of America
Ningbo, 315640 China
info@deli.com www.deliworld.com

 


**KEEP FOR
FUTURE USE**
Version: 1.0
Date: 02-2023

deli


USER MANUAL

Digital safe

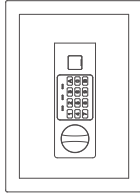


Product unpacking

 After unpacking the package, please check whether the product appearance is intact and check all accessories. If there is any defect, please contact the dealer!



Product diagram

 

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected for any satisfaction due to product quality problems, please contact authorized local dealers or our company for further warranty and the following text.

Warranty basis:
1. The product failure occurs under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase, request for warranty service. This warranty card shall be valid only after the following form is filled out in full and signed by the dealer.
2. No free of charge repair service shall be provided in the event of any of the following circumstances:

Expiration of the warranty period;
Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
Failure or damage resulting from unauthorized disassembly, repair or modification;
Failure or damage caused by force majeure;
Wear parts or accessories.

This warranty card is being delivered with the product, and only for our products. Please keep this warranty card in a proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: _____ Y _____ M _____ D

Opening the safe

Input the correct password, press 'X' or 'B' key to confirm, the buzzer beep once and green indicator light turns on, please ensure turn the knob to open the door within 5 seconds. If the door is not opened within 5 seconds, the buzzer will beep again and the door will be locked for 30 seconds. After the 30 seconds lockout, it will automatically unlock.

Locking the safe

Simply close the door and turn the knob counter-clockwise.

Replace the battery

Press 'X' or 'B' key after passcode input, if the red indicator lights up when the green indicator light blinks, that's indicating low voltage. Please replace the batteries.

Emergency opening

The emergency keys allow you to open the safe at all times, even when the batteries are run out or you have forgotten the codes. The operation method is the same as that opening.

Product installation

The product with prefilled mounting holes for easy fixing to a floor or wall with included expansion bolts.



Installation diagram

Precautions for use

Keep away from direct sunlight and heat sources, and prevent the product from falling from high altitude. Keep it in a safe place if you do not use the product for a long time. Please take out the battery to prevent leakage from damaging the electronic system.

WARRANTY CARD

Product Information	Product Name	Model Number	Serial Number	Serial Number
Customer Information	Company Name	Address	Contact	Contact
Sales Information	Dealer Name	Address	Contact	Contact
Maintenance Record	Date of Purchase	Customer Signature	Technician Signature	Technician Signature
	Manufacturer	Maintenance Results	Maintenance Results	Maintenance Results

This copy shall be cut along the dotted line and kept by the dealer.

WARRANTY CARD

Product Information	Product Name	Model Number	Serial Number	Serial Number
Customer Information	Company Name	Address	Contact	Contact
Sales Information	Dealer Name	Address	Contact	Contact
Maintenance Record	Date of Purchase	Customer Signature	Technician Signature	Technician Signature
	Manufacturer	Maintenance Results	Maintenance Results	Maintenance Results

Thank you for choosing Deli. Please read this instruction carefully and follow it before operating the safe.