

Item  
number: \_\_\_\_\_

Number: \_\_\_\_\_

## DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County  
Ningbo 315600 China Made in China  
info@nbdeli.com www.deliworld.com




KEEP FOR  
FUTURE USE

Version: 1.0  
Date: 02-2023

deli

# USER MANUAL

Digital safe

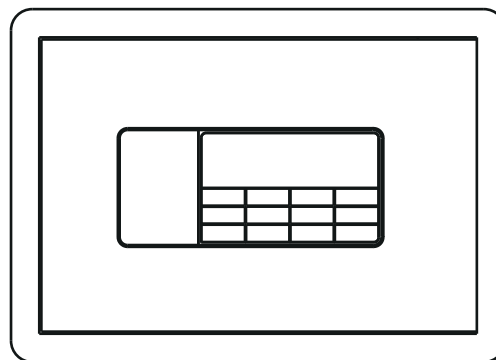

T550

## DIRECTORY

Product unpacking .....	01
Product diagram .....	01
First use .....	02
Password setting .....	02
Function setting .....	02
Opening and closing operation.....	02
Emergency opening.....	03
Alarm function.....	03
Installation instructions .....	04
Precautions for use .....	04
Common Faults and Troubleshooting methods.....	05
Warranty card .....	06

Welcome to use our safe (cabinet), safe box series products, please carefully read the instructions before use, and according to the instructions to operate correctly.

## Product unpacking

After unpacking the package, check whether the product appearance is intact and check all accessories. If there is any defect, please contact the dealer!



Manual 1 copy



Two main lock keys



Two spare keys




Expansion bolts 2 sets



4\*AA Batteries

## Product diagram

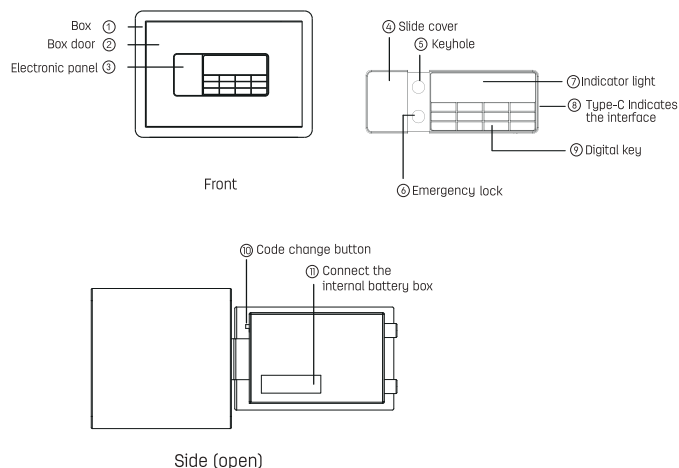

## First use

1. After placing the box, slide the slide cover to the left to the designated-position. Insert the main lock key and the emergency key respectively into the corresponding lock holes. Turn the emergency key clockwise first, and then turn the main lock key clockwise to open the door. Install the 4\*AA batteries into the battery box behind the door.
2. For the convenience of use, please keep the user manual and keys in a safe place in the box.

## Password setting

1. Open the door, press the code change button located at the back of the door, input the password after hearing the "beep" prompt tone, press [#] to confirm, hear the "beep" prompt tone indicator blinks white twice, input the password again, press [#] to confirm, hear the "beep" prompt tone indicator blinks green twice, it means the password is set successfully.
2. The password is 3-8 characters long. After entering the password, press [#] to confirm it.

## Function setting

1. Vibration alarm: in standby state, press [\*] when you hear the "beep" prompt tone indicator light flashes green twice, turn on the vibration alarm.
2. After opening and closing the door electronically, this function needs to be reset.

## Opening and closing operation

1. Password to open doors
  - ① Enter the password and press [#] to confirm. Please turn the key the main lock clockwise within 6 seconds to open the door.
  - ② If you enter a wrong password, press [\*] to clear it, and then re-enter the password.
  - ③ The initial password before delivery is 12345678. Please change the password before use.
2. Close the door  
Push the door closed in place, turn the main lock key counterclockwise and pull it out.

- 2 -

## Emergency opening

1. When the battery in the box is exhausted and cannot be operated, please use Type-c data cable for power supply. Insert the data cable into the Type-c interface on the right side of the electronic panel.
2. When the electronic system fails or the password is forgotten, please use the spare key to open the door. Open the door the same way.


## Alarm function

1. Battery power alarm
  - ① When waking up the system (open the door or set the password and other operations), if the battery voltage is low, the system will send out a "beep" alarm, for 5 consecutive times, the indicator flashes red light for 5 times, and the user must replace the battery as soon as possible.
2. password error alarm
  - ① When the password is wrong, the indicator flashes red light three times and gives the alarm of "beep".
  - ② If the password is wrong for 3 times, the system will alarm for 20 seconds. If you enter the correct password in time, the alarm will be removed.
  - ③ If the password is incorrect for five consecutive times, the system is locked for three minutes, during which the electronic panel cannot be operated.
3. vibration alarm  
After turning on the shock alarm, prying or shaking the box will produce a shock alarm. Enter the correct password in time to remove the alarm.

- 3 -

## Installation instructions

1. For the sake of safety, please be sure to fix the container on a solid concrete wall.

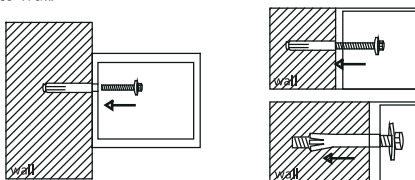

Installation diagram

## Precautions for use

1. Do not put the user manual, main lock key, emergency key and external battery case inside the box. Store them in other safe places.
2. If the product is not used for a long time, the battery should be taken out to prevent leakage from damaging the electronic system.
3. For safety, be sure to secure the container to a solid concrete wall.
4. Do not deposit excess cash and valuables without an on-duty or remote alarm device.

- 4 -

## Common faults and troubleshooting methods

Fault phenomenon	Cause of failure	Elimination method
No response is received when the password is entered numerically	Battery dead	Use an external battery box or emergency key to open the electronic combination lock and replace the battery
	Battery polarity is reversed	Load the battery correctly
	Circuit board fault	Please contact the maintenance department
The emergency key cannot be inserted or removed	There's a foreign object in the keyhole	Remove foreign bodies from keyholes
	The key is not turned to the limit	Please reinsert in the correct way
	The handle is not turned to the limit	Please turn the handle to the limit
The electronic combination lock has been opened. The door cannot be opened	After turning the handle for more than 7 seconds, the electronic lock is reset	Re-enter the password and turn to the limit in 6 seconds
Alarm does not go off	Battery dead	Please replace the battery
	Battery polarity is reversed	Load the battery correctly

- 5 -

## WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

### Warranty terms:

1.For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.  
2.Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.  
3.No free of charge repair service shall be provided in the event of any of the following circumstances:

- (1) Expiration of the warranty period;
- (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
- (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
- (4) Failure or damage caused by force majeure;
- (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase:        Y        M        D

## WARRANTY CARD

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

-----  
This copy shall be cut along the dotted line and kept by the dealer.  
-----

## WARRANTY CARD

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date