 


deli

Instruction Manual

Digital safe

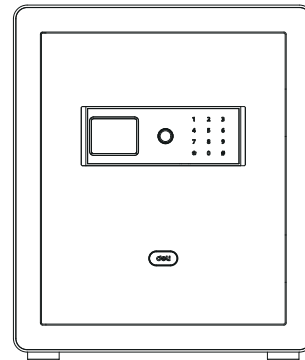

T570/T571/T572

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com



KEEP FOR
FUTURE USE

Version: 1.0
Date: 04-2023

Contents

1. Product Unpacking	1
2. Product Diagram	1
3. First Use	2
4. Password Setting	2
5. Function Setting	2
6. Door Opening/Closing Operation	2
7. Emergency Opening	3
8. Alarm Instructions	3
9. Installation Notes	4
10. Precautions for Use	5
11. Common Faults and Troubleshooting	5
12. After-sales Service	6

Welcome to our series products of safes (cabinets) and lock boxes. Please read the instruction manual carefully before use, and operate correctly according to the instructions.

1. Product Unpacking



Instruction manualx1



Spare keysx2

 


Expansion bolt×2




AA batteryx4


2. Product Diagram

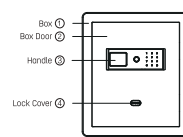

Front view

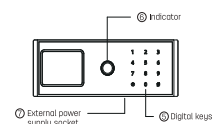 

Electronic Panel

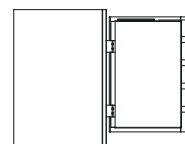 

Side view (with door open)



Internal battery compartment

3. First Use

- 1、After placing the case, first use the key to open the door and install the 4×AA alkaline batteries into the battery box behind the door.
- 2、For convenience, please store the user manual and keys in a safe place instead of in the box.

4. Password Setting

- 1、Open the box door, click [SET] and then press the [1] key on the electronic panel, and then set the password according to the voice prompts;
- 2、The length of the password is 3-8 digits, press the [#] key to confirm after entering the password;
- 3、In case of an error, you can press the [*] key to delete it and then re-enter.

5. Function Setting

- 1、Vibration alarm: open the box door, click [SET] and then press the [2] key on the electronic panel to turn on or off the vibration alarm.
- 2、Voice switch: open the box door, click [SET] and then press the [3] key on the electronic panel to turn on or off the voice prompt.
- 3、Anti-peeping virtual password: During the password input process, you can freely enter any password, as long as it contains the password you set, it will pass the verification.

6. Door Opening/Closing Operation

- 1、Open the door with password
 - ①Press the [#] button to enter the password after hearing "Please enter the password", and then press [#] to confirm. After password verification is completed, the lock will be released and indicator light turns on green .

- 2 -

then rotate the handle clockwise to open the door.

- ②If there is an error in entering the password, you can press the [*] key to delete them, and then re-enter the password.

2、Door Closing Operation

Push the door into place and turn the handle counterclockwise to complete the closing.

7. Emergency Opening

- 1、Please provide power by using the external battery compartment when the batteries are depleted and the operation cannot be made. Insert the plug of the external battery compartment into the power supply socket located below the panel, and enter the correct password to open the door.
- 2、Please use the emergency key to open the door when the electronic system fails or the password is forgotten. The way to open the door is the same as the initial use.

8. Alarm Instructions

1、Low battery alarm

①When waking up the system (open the door or set the password or other operations), the system will issue a voice prompt that the battery level is low if the battery voltage is low, and the user must replace the battery as soon as possible.

②The system will stop working if the battery is exhausted, you can open the door by using the external power supply or by using the key, the external power interface is on the electronic panel.

2、Wrong password alarm

①The maximum number of errors allowed for password verification is 5 times, the system will alarm and lock for 3 minutes if 5 times reaches,

- 3 -

 
during which the electronic panel cannot be operated.

3、Vibration alarm

- ①After turning on the vibration alarm, the alarm will be generated when prying or shaking the box.
- ②When the system alarms but is not locked, the alarm can be disarmed by entering the correct password in time. After the vibration alarm function is activated, the vibration alarm will not be triggered within five minutes after opening the door with the correct password.

9. Installation Notes

For the sake of safety, please be sure to fix the cabinet on a solid concrete wall.

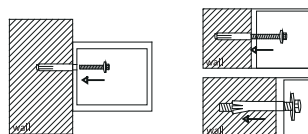

Installation layout

- 4 -

10. Precautions for Use

1. Do not put the user manual, emergency key inside the box. Store them in other safe places.
2. If the product is not used for a long time, the battery should be taken out to prevent leakage from damaging the electronic system.
3. For safety, be sure to secure the container to a solid concrete wall.
4. Do not deposit excess cash and valuables without an on-duty or remote alarm device.

11. Common faults and troubleshooting methods

Fault phenomenon	Cause of failure	Elimination method
No response is received when the password is entered numerically	Battery dead	Use an external battery box or emergency key to open the electronic combination lock and replace the battery
	Battery polarity is reversed	Load the battery correctly
	Circuit board fault	Please contact the maintenance department
The emergency key cannot be inserted or removed	There's a foreign object in the keyhole	Remove foreign bodies from keyholes
	The key is not turned to the limit	Please reinsert in the correct way
	The handle is not turned to the limit	Please turn the handle to the limit
The electronic combination lock has been opened. The door cannot be opened	After turning the handle for more than 7 seconds, the electronic lock is reset	Re-enter the password and turn to the limit in 6 seconds
Alarm does not go off	Battery dead	Please replace the battery
	Battery polarity is reversed	Load the battery correctly

- 5 -

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

1.For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.

2.Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.

3.No free of charge repair service shall be provided in the event of any of the following circumstances:

- (1) Expiration of the warranty period;
- (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
- (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
- (4) Failure or damage caused by force majeure;
- (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: Y M D

WARRANTY CARD

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Dealer Name		Contact		
	Address		Phone		
	Date of Purchase		Invoice No.		
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

----- This copy shall be cut along the dotted line and kept by the dealer. -----

WARRANTY CARD

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Dealer Name		Contact		
	Address		Phone		
	Date of Purchase		Invoice No.		
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date