

A line drawing of a safe. It has a rectangular shape with a handle on the left side and a circular keypad on the right side. The keypad has a small display screen at the top and a grid of buttons below it. There are also some small rectangular buttons or slots on the right edge of the safe.

301 Xuxiaoke Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com



Version: 1.0
Date: 04-2023

1. Product Unpacking	1
2. Product Diagram	1
3. First Use	2
4. Password Setting	2
5. Function Setting	2
6. Door Opening/Closing Operation	2
7. Emergency Opening	3
8. Alarm Instructions	3
9. Installation Instructions	4
10. Precautions for Use	4
11. Common Faults and Troubleshooting	5
12. After-sales Service	6



1

10

Diagram illustrating the components of the safe:

- Box ①
- Box Door ②
- Electronic Panel ③
- Lock Cover ④

Front

⑤ Display Screen



7 Battery Compartment

Note:
By rotating the upper half of the electronic panel counterclockwise, you can separate it from the lower half to expose the battery compartment.

Electronic Panel

⑧ Setting key

⑨ Light

3. First Use

- 1、After placing the box, remove the lock cover, insert the key into the lock hole, turn the key counterclockwise, and then turn the handle counterclockwise to open the door
- 2、Rotate the upper half of the electronic panel counterclockwise to detach the buckle position from the lower half of the electronic panel, take away the upper half of the electronic panel to reveal the battery compartment, install 4×AA batteries into the battery compartment, then align the upper half of the electronic panel with the buckle position and back to the lower half of the electronic panel, and rotate the upper half of the electronic panel clockwise.

4. Password Setting

Open the box door, press the setting button on the back of the door. After hearing "Beep", the display first shows "SET" and then displays "-----", enter a new password of 3-8 digits, press the [START] key to confirm. After hearing "Beep", enter the password again; when you hear "Beep" twice, the display shows "into", the password is set successfully. The initial password of this product is "12345678". Please reset your personal password before use to ensure safety.

5. Function Setting

Interior lighting function: When the password is entered to open the door, the interior LED lights up for 25 seconds.

6. Door Opening/Closing Operation

1. Open the door by using password

First press the [START] key, then press [START] to confirm after entering the

correct password. After hearing "Beep" twice, the display shows "OPEN", turn the handle counterclockwise to open the door; if you enter the password incorrectly and hear "Beep" three times, the display first displays "Error" and then "-----", please re-enter the password.

2. Door Closing Operation

Push the box door into place and turn the handle clockwise to complete the closing.

3. Hidden code operation

Press the "START" button twice and then enter the password. The number will be hidden on the display screen and you cannot see the digital information. The number will be displayed only after you enter the correct password.

7. Emergency Opening

Please use the spare key to open the door when the electronic system fails or the password is forgotten. The way to open the door is the same as the initial use.

8. Alarm Instructions

Wrong password alarm

1. If you enter the password incorrectly and hear "Beep" three times, the display first displays "Error" and then "-----", please re-enter the password.
2. After you enter incorrect passwords five times, alarm sound will last 20 seconds, and the safe will enter a 3 minutes lockout, the electronic panel cannot be operated during this period.

Low battery alarm

After entering the correct password, the display first shows "OPEN", then


- 2 -

- 3 -

"Lo-bat" and the red light is on. When you hear "Beep" twice, the battery is low, please replace the battery.

9. Installation Instructions

For the sake of safety, please be sure to fix the cabinet on a solid concrete wall.

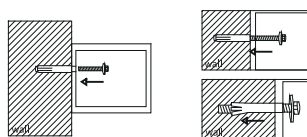

Installation layout

10. Precautions for Use

1. Do not put the user manual, main lock key, emergency key inside the box. Store them in other safe places.
2. If the product is not used for a long time, the battery should be taken out to prevent leakage from damaging the electronic system.
3. For safety, be sure to secure the container to a solid concrete wall.
4. Do not deposit excess cash and valuables without an on-duty or remote alarm device.

- 4 -

11. Common faults and troubleshooting

Fault phenomenon	Cause of failure	Elimination method
No response is received when the password is entered numerically	Battery dead	Rotate the upper part of the electronic panel counterclockwise and unscrew the panel cover to replace the battery
	Battery polarity is reversed	Load the battery correctly
	Circuit board fault	Please contact the maintenance department
The emergency key cannot be inserted or removed	There's a foreign object in the keyhole	Remove foreign bodies from keyholes
	The key is not turned to the limit	Please reinsert in the correct way
The electronic combination lock has been unlock. The door cannot be opened	The handle is not turned to the limit	Please turn the handle to the limit
	After turning the handle for more than 7 seconds, the electronic lock is reset	Re-enter the password and turn to the limit in 6 seconds
	Battery dead	Please replace the battery
Alarm does not go off	Battery polarity is reversed	Load the battery correctly

- 5 -

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.

2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.

3. No free of charge repair service shall be provided in the event of any of the following circumstances:

- (1) Expiration of the warranty period;
- (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
- (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
- (4) Failure or damage caused by force majeure;
- (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Locksworth CUSTOMER SUPPORT EMAIL: serviceglobal@nbdeli.com

Date of Purchase: _____ Y _____ M _____ D