

3. First-time Use

1. After placing the box in position, first open the electronic panel battery cover (the keyhole is inside the battery compartment). Insert the key into the keyhole and turn it counterclockwise, then turn the handle clockwise to open the door. Install four AA batteries into the battery compartment on the electronic panel.

4. Password Setup

1. Open the box door, press the setup button on the back of the box door and the yellow light on the electronic panel will illuminate twice while you hear a "beep" sound. The yellow light will stay on continuously. Then, enter 3-d digit password and press "*" or "0" to confirm. The yellow light will illuminate twice, and the buzzer will sound twice, indicating that the setting is successful.
2. The factory default password for this product is "666". To ensure security, please reset your personal password before using it.

5. Door Opening and Closing Operations

Enter the correct password, and after entering the password, press "Y" or "A" to confirm. If you hear two "beeps" and the green light illuminates, it indicates successful entry. Rotate the handle to open the box door. If the yellow light flashes and you hear three "beeps," it means the password entered is incorrect, and you need to input the correct password again.

-2-

6. Emergency Opening

F there is a malfunction in the electronic system or if you forget the password, please use the spare key to open the door. The method of opening is the same as the first time.

7. Alarm Instructions

F If three consecutive incorrect passwords are entered, the system will trigger an alarm, and the electronic panel will lock for 20 seconds, during which the electronic panel cannot be operated. If three consecutive incorrect passwords are entered again, the system will trigger an alarm, and the electronic panel will lock for 5 minutes, during which the electronic panel cannot be operated.

L Low Battery Voltage Warning

If the battery voltage is low, a red indicator light on the electronic panel will illuminate, reminding you to replace the batteries.

8. Installation Instructions

For the sake of safety, please be sure to fix the cabinet on a solid concrete wall.



Installation layout

- WARRANTY CARD

Product Information	Product Name	Product Model	Serial Number		
Customer Information	Company Name	Company Address	Company Phone	Company Email	
	Address		Phone	Company Fax	
Sales Information	Seller Name		Company		
	Address		Phone		
	Date of Purchase			Invoice No.	
Test Results and	Test Name	Test Results	Test Date	Test Location	Test Status

This page shall be cut along the dotted line and kept by the dealer.

- WARRANTY CARD

Product Identification	Product Name	Product Model Number	Order Number	Date of Issuance	
				Month	Year
Customer Identification	Company Name			Contact	
	Address			Phone	
	Order Name			Contact	
Sales Information	Address			Phone	
	Date of Purchase			Invoice No.	
	Quantity of Units	Manufacturer's Name	Customer's Name	Model or Serial Number	Manufacturer's Date
Inspector/Recorder					

Contents

 
 
1. Product Unpacking	1
2. Product Diagram	1
3. First-time Use	2
4. Password Setup	2
5. Door Opening and Closing Operations	2
6. Emergency Opening	3
7. Alarm Instructions	3
8. Installation Instructions	3
9. Usage Precautions	4
10. Common faults and troubleshooting	4
11. After-sales Service	5

Welcome to our series products of safes (cabinets) and lock boxes. Please read the instruction manual carefully before use, and operate correctly according to the instructions.

1. Product Unpacking



2. Product Diagram



- 1 -

9. Usage Precautions

1. Do not put the user manual, main lock key, emergency key inside the box. Store them in other safe places.
2. If the product is not used for a long time, the battery should be taken out to prevent leakage from damaging the electronic system.
3. For safety, be sure to secure the container to a solid concrete wall.
4. Do not deposit excess cash and valuables without an on-duty or remote alarm device.

10.Common faults and troubleshooting

Fault phenomenon	Cause of failure	Elimination method
No response to required speed by the elevator to start or retard numerically	Rotating speed Rotary priority to monitor Clutch broken fault	Slide to the right to check the clutch pressure in the 2000 psi range and the 2000 psi pressure Slide the battery correctly
The emergency key cannot be inserted or removed	There is a foreign object in the key The key is not inserted to the limit	Press to control the maintenance door Remove foreign bodies that
The elevator controller lock cannot be opened	The key is not inserted to the limit The key is not inserted to the limit The key is not inserted to the limit The key is not inserted to the limit	Press to control the maintenance door Remove foreign bodies that Remove the key from the control Remove the key from the control
The elevator controller lock cannot be opened	The key is not inserted to the limit The key is not inserted to the limit The key is not inserted to the limit The key is not inserted to the limit	Press to control the maintenance door Remove foreign bodies that Remove the key from the control Remove the key from the control
Alarm does not go off	Rotating speed Rotary priority to monitor Clutch broken fault	Slide to the right to check the clutch pressure in the 2000 psi range and the 2000 psi pressure Slide the battery correctly

-4-

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:
1 For product failure

17. If product failure occurs under normal operating circumstances, rise or change repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.

18. Customers are to present this warranty card and the original purchase receipt to our company upon return for examination. This warranty card shall be valid only after the following form is filled out in detail and affixed with official seal of the dealer.

19. No fee of charge repair service shall be provided in the event of any of the following circumstances:

following circumstances:

- (1) Expiration of the warranty period;
- (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
- (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
- (4) Failure or damage caused by force majeure;

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: _____ Y _____ M _____ D

LEVEL OF PERFORMANCE: _____ Y _____ PS _____ M

- 5 -

- 5 -