 


BUKU PANDUAN

MESIN HITUNG UANG PORTABEL

Nomor Pendaftaran: IMKG.I036.05.2025

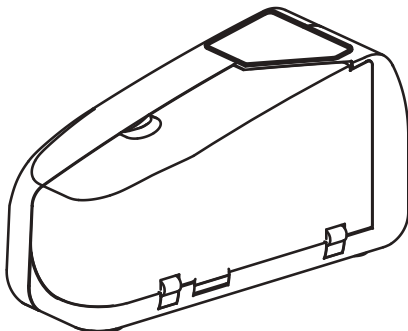

Diimport Oleh:

PT Deli Group Indonesia

The Prime Office Suite Lantai 12

Jalan Yos Sudarso No 30 RT 010 RW 006, Sungai Bambu

Tanjung Priok, Kota Administrasi Jakarta Utara

T985

DESCRIPTION OF PRODUCT

It is a portable, hand-held cash counting machine that counts more than 600 banknotes per minute. Applicable to most currencies in the world (except for banknotes with holes)

1. TECHNICAL INDICATORS


Capacity of counting	120pcs bills
Counting display	3Digital LED
Counting speed	≥600pcs/min
Voltage	6V ---
Power	9W
Product Dimensions	189×75×101mm
Net Weight	0.38 kg

2. PACKAGE CONTENTS

				
Machine	User manual	Power adapter	Counting guide	Leather sheath

3. INTRODUCTION TO MAIN COMPONENTS

- | | |
|-----------------------------|------------------|
| 1. Counting Guide | 6. Left Cover |
| 2. Pivoting Feeding Surface | 7. Battery Cover |
| 3. Right Cover | 8. Power Port |
| 4. Counting Wheel | |
| 5. Protective Cover | |

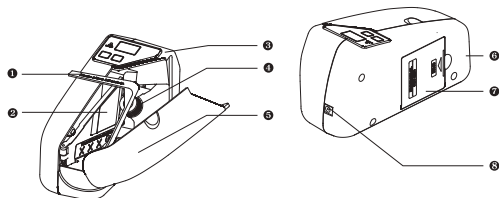 

4. INTRODUCTION OF PANEL

1. START key

Short press it to enter the state of counting. When banknotes counting completed, short press it again to reset the number of counted.

2. ADD key

 
Short press it to enter the accumulative banknote counting mode, and the number of banknotes counted will be accumulated.

5. FUNCTION DESCRIPTION

1.Connect the power correctly or install the batteries (4pcs AA(LR6)).

2.Count

As shown in the picture below, open the transparent cover and turn on the machine. The initialization time is no more than 3 seconds. After the self-checking operation is completed, the machine will enter the working state. Put the counting guide in the right place, press the pivating feeding surface to put into the bills (Be sure to push them to the end). Short press the "START" key to count, short press it again to reset. If you need to accumulate banknotes, remove the first batch that have been counted, short press "ADD" to accumulate banknotes. (Note: It is recommended to count the same batch of banknotes once more to ensure accuracy)

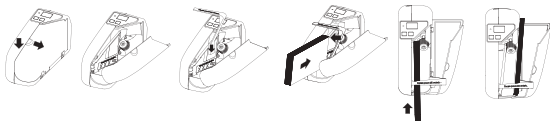

6. HOW TO PLACE BILLS CORRECTLY

In order to get the correct quantity, make sure the bills are the same size and neatly placed (as shown in the picture below) each time you count them, otherwise confusion of bills will lead to inaccurate counting.



7. FAILURE DESCRIPTION AND MAINTENANCE

- ›Check if the power supply is consistent with the specified power supply
- ›Turn on the power switch.After the self-diagnosis of the machine is completed, the count is displayed as "0", indicating that the machine is working normally.If other error code displayed,It means that a certain part of the machine is malfunctioning.The malfunction descriptions and maintenance are as follows.

8. DAILY MAINTENANCE

- ›Clean it regularly(usually once a week).The power must be cut off when cleaning.Turn off the machine when in non-working hours.
- ›Keep the machine clean to keep the best performance.
- ›Do not store in a humid place.

DESKRIPSI PRODUK

Ini adalah mesin hitung uang genggam portabel yang dapat menghitung lebih dari 600 lembar uang kertas per menit. Berlaku untuk sebagian besar mata uang di dunia (kecuali uang kertas berlubang).

1. INDIKATOR TEKNIS


Kecepatan Penghitungan	120 lembar uang kertas
Kapasitas Hopper	3 LED digital
Kapasitas Stacker	≥600 lembar/menit
Tegangan	6V ---
Daya	9W
Dimensi Produk	189×75×101mm
Berat Bersih	0.38 kg

2. ISI PAKET

 Mesin	 Buku Panduan	 Adaptor Daya	 Pemandu Penghitungan	 Sarung Kulit
--	---	---	---	---

3. PENGANTAR KOMPONEN UTAMA

- | | |
|-------------------------|--------------------|
| 1. Pemandu Penghitungan | 6. Penutup Kiri |
| 2. Tray Kertas Berputar | 7. Penutup Baterai |
| 3. Penutup Kanan | 8. Port Daya |
| 4. Roda Penghitung | |
| 5. Penutup Pelindung | |

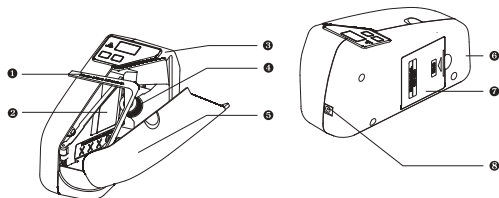 

4. PENGANTAR PANEL

1. Tombol START

 
Tekan sebentar untuk masuk ke mode penghitungan. Saat penghitungan uang kertas selesai, tekan sebentar lagi untuk mengatur ulang jumlah yang dihitung.

2. Tombol ADD

Tekan sebentar untuk masuk ke mode penghitungan uang kertas akumulatif. Dan jumlah uang kertas yang dihitung akan diakumulasikan.

5. DESKRIPSI FUNGSI

1. Hubungkan daya dengan benar atau pasang baterai (4 buah AA (LR 6)).
2. Penghitungan Seperti yang ditunjukkan pada gambar di bawah, buka penutup transparan dan nyalakan mesin. Waktu inisialisasi tidak lebih dari 3 detik. Setelah operasi pemeriksaan mandiri selesai, mesin akan memasuki kondisi kerja. Letakkan pemandu penghitungan di tempat yang tepat. Tekan tray kertas untuk memasukkan uang kertas (Pastikan untuk mendorongnya sampai ujung). Tekan sebentar tombol "START" untuk menghitung, tekan sebentar lagi untuk mengatur ulang. Jika Anda perlu menambahkan uang kertas tambahan, keluarkan kumpulan kertas pertama yang telah dihitung, tekan sebentar "ADD" untuk menambahkan uang kertas. (Catatan: Disarankan untuk menghitung kumpulan uang kertas yang sama sekali lagi untuk memastikan keakuratan)

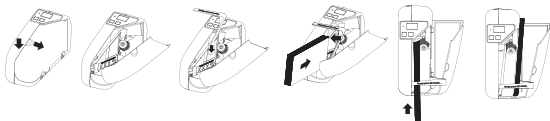

6. CARA MENEMPATKAN LEMBARAN UANG DENGAN BENAR

Agar memperoleh jumlah yang tepat, pastikan uang kertas berukuran sama dan tersusun rapi (seperti gambar di bawah) setiap kali menghitungnya. Jika tidak, kesalahan dalam peletakkan uang kertas akan menyebabkan penghitungan tidak akurat.



7. DESKRIPSI KESALAHAN DAN PEMELIHARAAN

- > Periksa apakah catu daya sesuai dengan catu daya yang ditentukan
- > Nyalakan sakelar daya. Setelah diagnosis mandiri mesin selesai, hitungan ditampilkan sebagai "0", yang menunjukkan bahwa mesin bekerja secara normal. Jika kode kesalahan lain ditampilkan. Itu berarti bahwa bagian tertentu dari mesin tidak berfungsi. Deskripsi kerusakan dan perawatannya adalah sebagai berikut.

8. PERAWATAN HARIAN

- > Bersihkan secara teratur (biasanya seminggu sekali). Listrik harus diputus saat membersihkan mesin. Matikan mesin saat di luar jam kerja.
- > Jaga kebersihan mesin agar tetap berfungsi dengan baik.
- > Jangan simpan di tempat yang lembap.

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

- For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
- Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
- No free of charge repair service shall be provided in the event of any of the following circumstances:
 - Expiration of the warranty period;
 - Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
 - Failure or damage resulting from unauthorized disassembly, repair or modification;
 - Failure or damage caused by force majeure;
 - Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: _____ Y _____ M _____ D

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

This copy shall be cut along the dotted line and kept by the dealer.

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

CERTIFICATE

Inspektur: _____

Tanggal Manufaktur: _____

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com



**SIMPAN UNTUK
PENGUNAAN DI
MASA DEPAN**

Versi: 1.0
Tanggal: 04-2025