 


deli

 
USER MANUAL

Stand Barcode Scanner No.S231

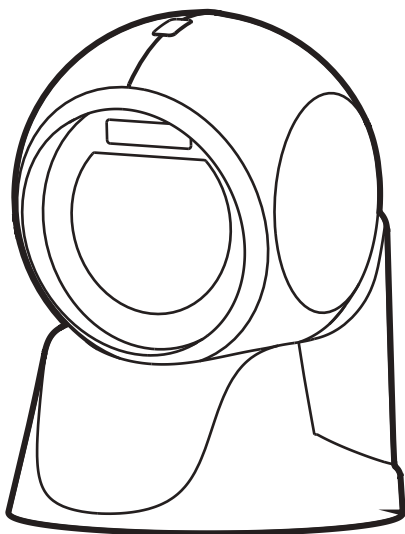

Dear customers , thank you for your products . We are committed to providing our customers with high quality products To ensure best performance,please read this manual carefully before use !

Component description

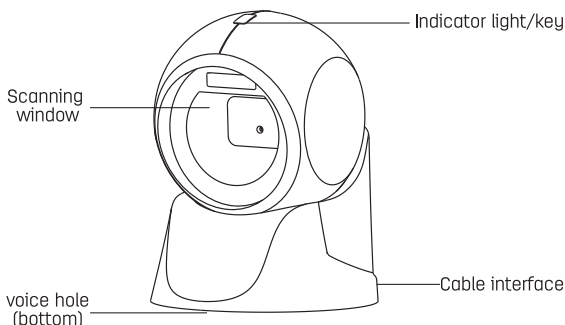

Decoding mode switching

 
Long press the top key for 3 seconds to switch between 1D/1D+2D modes;

The green indicator light is always on: it can read 1D+2D codes;
The red indicator is always on: only 1D code can be read;

Press the top key twice quickly to switch to the key mode, and return to the previous mode without action within 5 seconds

Removal of cable wires

Press the crystal plug spring piece by hand and gently pull the cable to make it come out of the two-dimensional platform scanner interface

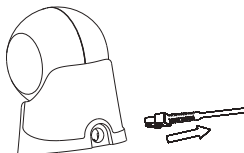

Technical parameter

Input voltage	DC5V±0.5V
Operating current	210mA
Standby current	130mA
Light source	White LED
Scan barcode category	1D code 2D code
Reading accuracy	1D ≥ 5mil 2D ≥ 10mil
Decoding type	1D: AIM-128 、 Code 39 、 Code128 、 Codabar、 EAN-8、 EAN-13 、 ISBN 、 UCC / EAN-128、 UPC-E UPC-A (Deutsche12 , Deutsche14、 GSI-RSS14 、 Gsi-rsslimited 、 Industrial 2 of 5、 interleaved 2 of 5 、 ISSN 、 ITF-14 Matrix 2 of 5、 Msi-plessey 、 Rss-expand 、 Standard 2 of 5、 Code 11 、 Code 93) 2D : QRCode、 Data Matrix , (PDF417 , Micro QR)
Operating temperature	0℃ ~ +45℃
Storage temperature	-20℃ ~ +60℃
Operating humidity	5%~90% (No condensated water)
Prompt mode	Buzzer, indicator light
Interface type	USB
Scanning mode	Sensing mode
The anti-seismic capacity	Can pass the 1.0m free fall test

Decoding mode switching

Stand Barcode Scanner×1, USB Cable×1, Manual×1

Global configuration code setting



Restore Factory Defaults



Allow to read all barcodes
(all supported barcodes can be read)

Communication interface settings



USB function



USB virtual serial port function

Keyboard Mode Settings

Keyboard case control



Keyboard case control



Forced case interchange of letters



Uppercase mode



Lower case mode

Common terminator settings



Do not add terminators



Allow add terminators



Add carriage return terminator



Add TAB terminator



Add carriage return line
break terminator

Decode sound settings

1.Turn on decoding sound/Turn off decoding sound



Turn on decoding sound



Turn off decoding sound

2.Sound type



Type1



Type2



Type3

Display program version number



Display program version number

Troubleshooting

NO.	Problem	Possible causes	Solution
1	The interface cable is correctly installed, but the white fill light is not displayed	Scanner not powered	Make sure the host is powered on and turned on. When using the USB connector, connect the USB to the USB connector on the computer motherboard. Do not use the extended USB connector and other USB extension cables
		Incorrect connection of interface cable	Please check whether the cable connection is loose
2	There is a white fill light, but the barcode cannot be read	This type of bar code system is not enabled	Open the code system by reading the setting code
		Bar code is damaged	Please try scanning other barcodes with the same barcode type
		Improper distance between scanner and barcode	Please move the barcode scanner near or far away from the barcode
		The height of the barcode scanner is not enough to completely cover the barcode	Read the barcode after aligning it
3	The scanned data is displayed incorrectly on the host	Input method error	Convert the input method to the standard English input method
		Other settings have been made to the scanner	Restore the scanner parameters to the factory settings, or contact the manufacturer's service center
4	The barcode characters are garbled or wrong	The keyboard country setting of the barcode scanner does not match the country where the keyboard is used	Set the barcode scanner keyboard country to match the country where the keyboard is used
5	Other conditions cannot be decoded	Device transfer error	Turn off the power supply of the equipment, connect the equipment and the scanner correctly, turn on the power supply of the equipment, restore the parameters of the scanning platform to the factory settings and scan the code again

Simple maintenance method

1.The dirt and dust on the scanning window sometimes affect the work of the scanner. When cleaning, you should use high-quality facial tissue paper, gently wipe it, and then blow it with a blowing balloon. If the paper with poor quality is used for wiping for a long time, the surface finish of the scanning window will be damaged and the reading effect of the scanner will be affected.

2.The shell of the scanner can be wiped with a soft cleaning cloth. If necessary, a small amount of detergent can be added with water, and then wiped with a soft cloth dipped in water.

Maintenance

Our company is responsible for free maintenance in case of product failure within one year of normal use from the date of purchase.

The start date of the warranty period is subject to the purchase date and invoice of the product warranty card

Please show the product warranty card and invoice during maintenance.

Please keep this warranty card properly. If it is lost, it will not be replaced. The purchase date filled in must be consistent with the invoice number, otherwise it will be invalid.

This card cannot be altered, otherwise it will be invalid. For products beyond the warranty period or not subject to free maintenance, the maintenance service center of our company is still enthusiastic to serve you.

One of the following conditions does not belong to the scope of free maintenance:

- 1.products beyond the warranty period
2. Those who cannot provide purchase invoices or valid vouchers.
3. The appearance is naturally old due to use, and the consumer requires updating.
4. Failure caused by failure to use according to the instructions
5. Failure caused by falling or collision.
6. Failure caused by self assembly, disassembly and repair.
7. Samples and processed products for commercial display and products with performance overload test

The table of toxic and hazardous substances/elements and their content

Part name	Hazardous and noxious substance or elements					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Cable	○	○	○	○	○	○
Electronic parts	×	○	○	○	○	○
Injection molded parts	○	○	○	○	○	○

○: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006 «Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products».

×: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006 «Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products». Due to limitations of science and technology development, these toxic or hazardous substances cannot be replaced or reduced for now. Under normal use conditions, no leakage or abrupt change will occur within 10 years, nor will it cause pollution to the environment or damage to people and property.



Environment-Friendly Use Period:

This mark refers to the environment-friendly use period of electronic and electrical products sold in accordance with the Regulation of the People's Republic of China on Limit on Use of Hazardous Substances in Electric and Electronic Products and General Guidelines of Environment-friendly Use Period of Electronic Information Products.

WARRANTY CARD

Customer Name		Phone		Postcode	
Mailing Address					
Product Name		Model			
Date of Purchase					
Province		City/town			

REPAIR FORM

Date	Description	Replaced parts		Maintenance Technician
		Name	Quantity	

★ For any question, please contact your local dealer.

CERTIFICATE

Inspector: _____

Date of manufacture: _____

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com



**KEEP FOR
FUTURE USE**

Version: 1.0
Date: 10-2022