


deli

User Manual

Thermal Label Printer

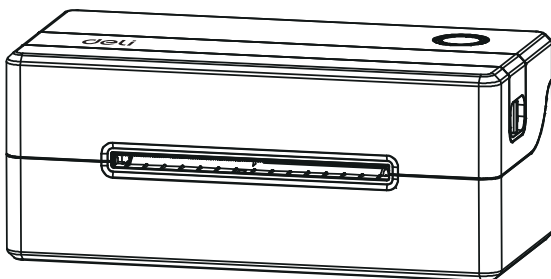

MODEL: S340

1 Packing List

Please check if the product is intact after unpacking and verify that all the accessories have been received. If any items are missing, please contact your dealer.



 
Printer



Power Cord



USB Cable



Power adapter



User Manual

Caution:

 

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take appropriate measures.

Note:

1. Please visit Deli official website (<https://www.deliworld.com>) to download the drivers and the editing software.
2. Please use the "First Sheet Rewind" function indoors without direct sunlight.

It is recommended to disable the "First Sheet Rewind" function in Settings in bright light conditions.

2 Appearance and Components

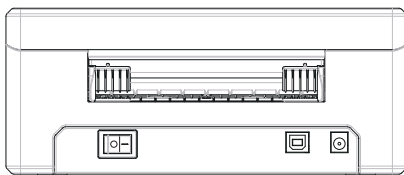


Power switch



USB port





Power port

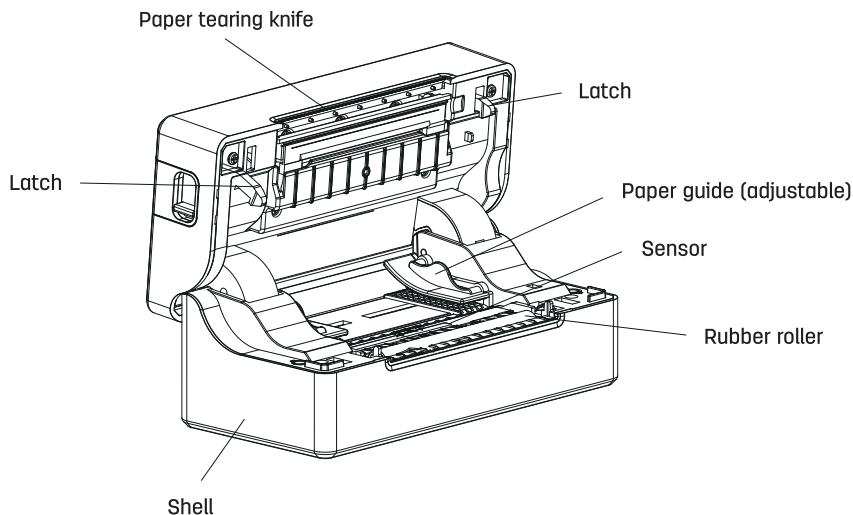


3 Loading the Paper Roll

1. Place a paper roll into the rear of the printer so that it is in the middle of the paper guide.


2. Face the front of the printer, press the top cover button in the direction of the arrow, and lift the top cover up.

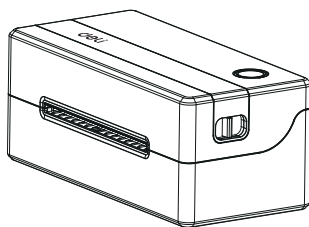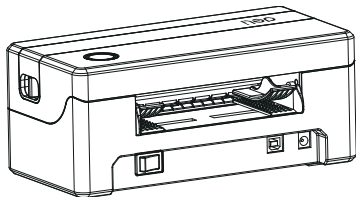

3. Pull out some paper through the paper guide, adjust the paper width guide against both edges to fasten the paper.

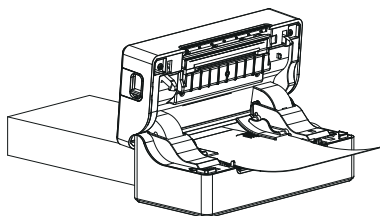


4. Press down the top cover until it clicks shut and tear excess paper in the tear-off direction.

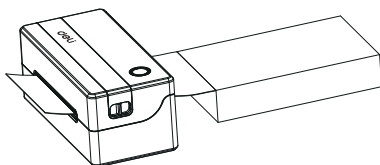


4 Power Connection

1. Make sure that the power switch is at the OFF (O) position.
2. Connect the power adapter to the printer.
3. Connect the other end of the power cord to a nearby outlet.

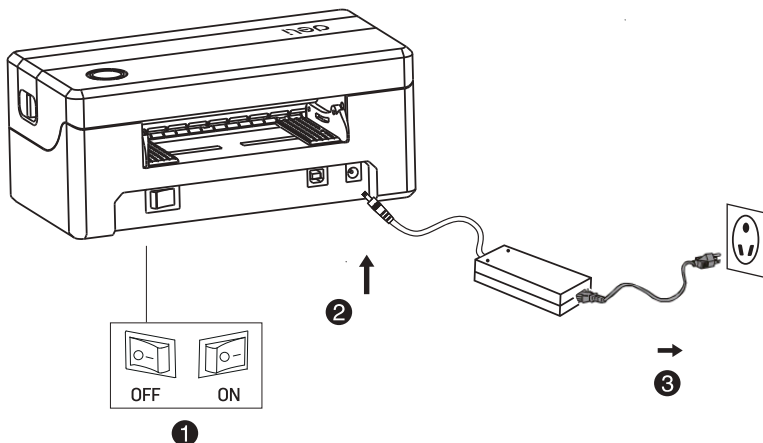

5 Tips

1. For use of paper rolls, we recommend the Deli Waybill Box 15208.
2. We recommend using Deli-brand consumables to protect your print head.

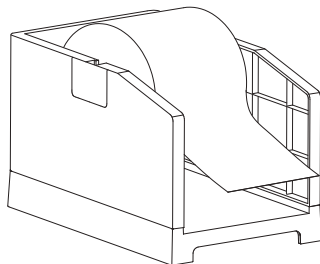

6 Button function setting

It could carry out simple operation to the printer by the button.

Scenarios	Button operation	Corresponding functions
Power Off	Press and hold + turn on the printer	Print self-test page
Standby	Press and hold 3S	Enter label specification learning mode
Open the cover	Press and hold 10 S	Restore factory settings
Standby	Press	Automatically feed one blank label sheet
Continuous printing process	Press	Pause printing
Pause printing	Press	Continue printing

7 Indicator light status description

Indicator status	Status description	
Indicator always lights up	Normal standby	
Indicator flashes	Buzzer alarm	
Buzzer alarm (common)	2 Sounds	Printer mechanism error
	3 Sounds	Paper shortage error
	5 Sounds	Overheating error
	6 Sounds	Cover opening error
	7 Sounds	Seam label error

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

- For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
- Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
- No free of charge repair service shall be provided in the event of any of the following circumstances:
 - Expiration of the warranty period;
 - Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
 - Failure or damage resulting from unauthorized disassembly, repair or modification;
 - Failure or damage caused by force majeure;
 - Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: _____ Y _____ M _____ D

Product Information	Product Name				Serial Number		
	Product Model Number				Manufacturing Date		
Customer Information	Company Name					Contact	
	Address					Phone	
Sales Information	Dealer Name					Contact	
	Address					Phone	
	Date of Purchase					Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature		Maintenance Date	

This copy shall be cut along the dotted line and kept by the dealer.

Product Information	Product Name				Serial Number		
	Product Model Number				Manufacturing Date		
Customer Information	Company Name					Contact	
	Address					Phone	
Sales Information	Dealer Name					Contact	
	Address					Phone	
	Date of Purchase					Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature		Maintenance Date	

Special Disclaimer:

While information of this manual has been rigorously checked and reviewed, we still cannot rule out the possibility of spelling mistakes and technical negligence and/or errors. Such negligence and/or errors will be corrected in the updated version(s) without further notice. The intellectual property of this manual belongs to our company, and no organization or individual is allowed to change the content.

-  WARNING: Running this device in a residential environment may cause radio interference.
-  WARNING: Has sharp edges, do not touch.
-  WARNING: Hot parts! Touching the parts will burn your fingers wait half an hour after turning off the power before touching the parts.
-  WARNING: Moving componenets, do not touch.

CERTIFICATE

Inspector: _____

Date of Manufacture: _____

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com



**KEEP FOR
FUTURE USE**

Version: 1.0
Date: 09-2023