 


# User Manual

Label Printer

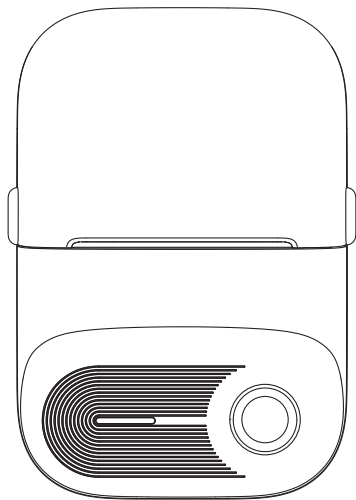

S441

# 1 Packing List

---



Printer



Power Cord



Label Paper  
(50×30mm) 230 sheets



 
Instruction Manual

## Warnings:

1. Operating this device in a residential environment may cause radio interference.
2. Do not touch the sharp edges.
3. Be careful with hot components! Touching these parts may result in burns. Wait for half an hour after turning off the power before touching the components.
4. Using a battery pack of the incorrect model may cause an explosion risk.

# 2 Button and Interface Diagram

---

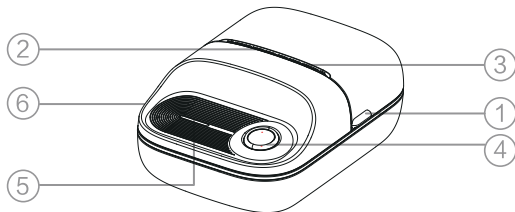

① Open Lid

③ Tear-off Blade

⑤ Power Button

② paper outlet

④ Power Button

⑥ Charging Port

# 3 Instructions for Use

---

## 1. Button Operation Instructions:

Power On: Press and hold the power button for 3 seconds until the indicator light turns on.

Power Off: Press and hold the power button for 3 seconds until the indicator light turns off.



## 2. Power Indicator Light Status:

Solid White Light: Fully charged (battery full)/Printing/Ready.

Flashing White Light: Charging in progress.

Solid Red Light: Out of paper/Lid open/Overheating/Firmware upgrade.

Flashing Red Light: Low battery.

## 3. APP Connection:

Ensure the label printer has sufficient battery power and is turned on.

Scan the QR code below, or visit app stores such as AppGallery or the App Store to download the "Printy Bunny" APP and register an account.

Scan to download the app.



Printy Bunny 

- APP Store
- Google play

.....

Ensure that Bluetooth on your mobile phone is turned on. Enter the home page of the APP and click the "Add Device" button. Click on the detected device to connect.



#### 4. APP Settings:

##### Bluetooth Pairing:

After the first successful connection, the label printer will automatically connect when the application is launched next time.

##### Device Management:

You can confirm pairing information, battery level, device number, firmware version, etc., in Device Management.

You can set the automatic shutdown time in Device Management.



#### 5. Charging Instructions:

It is recommended to fully charge the device before the first use. To ensure optimal printing performance, it is advised to maintain a battery level above 40%.

 
(Note: When the battery level is low, the printing result may appear lighter.)

It is recommended to use the original power cord for charging.

The product does not come with an adapter. It is suggested to use a 5V-2A power adapter for charging, or you may connect it to a computer via the USB port for charging.

If the device is not in use for an extended period, it is recommended to recharge it every three months to prevent natural degradation of the lithium battery, which may render it unable to charge normally.

Note: When using a power adapter for charging, only use one that is certified with CCC and meets the required standards. Users are prohibited from disassembling the device.

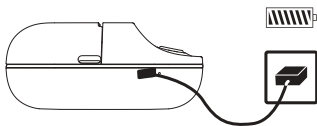

6. To ensure the printing quality, please give priority to purchasing the consumables specified by the official.



## 7. Frequently Asked Questions:

For troubleshooting and solutions to common issues, please refer to the Storage Guide in the "Printy Bunny" APP.

 
If the Storage Guide does not resolve your issue, you may submit feedback through the Feedback section to contact us.

 
 
## 8. Replacing the Label Paper:

Open the Lid:

When using a new roll of label paper, pull the paper out completely until it reaches the paper exit. Then, press the lid down firmly to ensure it is securely closed:

Remove the production date label:

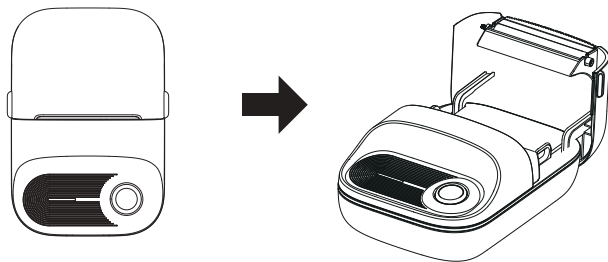

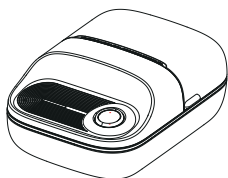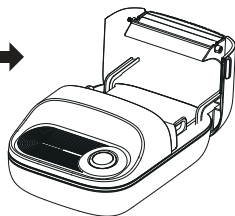

## 4. Safety and Precautions

---

### 1. Charging Precautions:

Improper charging can damage the print head. Please charge according to the instructions in the "Charging Instructions" section of the user manual.

Do not insert or remove the charging cable with excessive force.

After charging is complete, promptly unplug the charger.

Use the original power cord for charging. Using other power cords may cause the printer to overheat, catch fire, or ignite, posing hazardous conditions.

Do not charge near a heat source, in direct sunlight outdoors, or in other hot locations.

### 2. Print Head Management and Precautions:

It is recommended not to use the device in high humidity or dusty environments.

The print head may become overheated after printing. Do not touch it directly.

Do not touch the print head when replacing the label paper.

To prevent static electricity from damaging the thermal print head, avoid touching the print head.

Gap Paper:

**Note:** The S441 supports gap paper.





ผู้ใดมิไว้ในครอบครอง หรือ ใช้ซึ่งเครื่องวิทยุ  
คมนาคมหรือตั้งสถานีวิทยุคมนาคมนี้ ต้องได้รับ  
ใบอนุญาตจากเจ้าพนักงานผู้ออกใบอนุญาต  
หากฝ่าฝืน มาตรา 6 หรือมาตรา 11 มีความผิด  
ตามมาตรา 23 แห่งพระราชบัญญัติวิทยุ  
คมนาคม พ.ศ. 2498 ต้องระวางโทษปรับไม่เกิน  
หนึ่งแสนบาท หรือจำคุกไม่เกินห้าปี หรือทั้งปรับ  
ทั้งจำ



**nanb.** | โทรคมนาคม  
กำกับดูแลเพื่อประชาชน  
Call Center 1200 ( 1นสวร )

## CERTIFICATE

Inspector: \_\_\_\_\_

Date of manufacture: \_\_\_\_\_

### **DELI GROUP CO., LTD.**

Deli Industrial Zone, Ninghai County, Ningbo  
City, Zhejiang Province, China Made in China  
info@nbdeli.com      www.deliworld.com



**KEEP FOR  
FUTURE USE**

Version: 1.0  
Date: 03-2025