 


USER MANUAL

Laminator

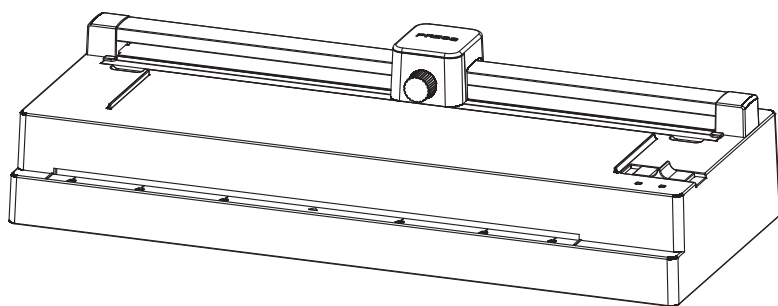

T110

Thank you for purchasing a Deli laminator. Please use Deli branded laminating pouches with the Deli laminator which will preserve your documents and photos, making them waterproof, tear-proof, cleanable and delicate. Be mindful that removal of lamination could be very difficult and risky.

To avoid personal injury or property damage, please read this manual carefully and use the product accordingly.

1. Attention

The plug on the power supply cord is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

The appliance shall be connected to a MAINS socket outlet with a protective earthing connection.



Warning! Keep out of the reach of children.



Warning! Do not touch the pouch inlet with your hand during operation.



Warning! Do not touch the surface of the machine with your hand during operation.



Warning! Please do not allow tie, necklace, sleeves, etc. to get pulling into the pouch inlet.



Warning! Please do not allow your hair to get pulling into the pouch inlet.



Warning! Please be cautious of hot surface during operation.



Warning! Do not disassemble or repair the machine by yourself in any way, to avoid electric shock or accidental injury. In case that an item gets pulled into the laminator and the machine fails, please unplug the power cord and contact your dealer or after-sales service center and follow their instructions.



Warning! Do not splash water onto the machine, avoid a fire or electric shock.



Warning! Do not operate the machine with wet hands, to avoid electric shock or accidental injury.



In case of power outage during operation, please pull out the item being laminated evenly within a short time, and unplug the machine, to avoid fire or electric shock.



Warning! Do not damage or process the power cord or place objects on the power cord, to avoid a fire or electric shock.



In case of smoke, odor or other abnormal conditions, please turn off the power switch immediately and stop using, to avoid a fire or electric shock.



Always unplug the power plug before moving the laminator.



Do not use the laminator if the machine or power cord is damaged, to avoid a fire or electric shock.



When operating the power switch, please make sure that the power plug is properly inserted into the power socket, to avoid damage to the machine. (There will be a crisp crackling sound when the switch is in good contact)



Correct state



Error state



Correct state



AC voltage.



To refer to text in an accompanying document.



Only suitable for use in indoors.



This appliance bears the WEEE mark (Waste of Electric and Electronic Equipment) signifying that, at the end of its life cycle, it should not be disposed of with household waste, but at a recycling centre. The recycling of waste contributes to the conservation of our environment.

2. Safety Instructions (Please follow the following precautions to ensure safe use)

Placement of the laminator:

- (1) Do not put the machine in damp place or near the air conditioning vent, to avoid dangerous accidents such as electricity leakage and insulation failure.
- (2) Please ensure the machine is on a flat and level surface, and leave enough space on the side of the pouch outlet.
- (3) Please do not place anything on top of the laminator.
- (4) Be sure to use AC230V power supply.

Laminating pouch:

 
- (1) It is recommended to use the laminating pouches of our company. Pouch of other specification or defective pouches may get caught in the laminator.

- (2) It is recommended to use a laminating pouch 5~6mm larger than the item to be laminated. Inappropriate sized pouches will affect the lamination effect negatively. If there is no pouch with the right size, a larger pouch may also be used. Please place the item within pouches centered as shown in Figure A below and trim it after lamination.

Items to be laminated:

Lamination is conducted through heating and pressurization. The laminating pouch might be rolled up into the machine due to incorrect operation. Therefore, please do not laminate the following items:

- (1) Inflammable and heat sensitive materials (e.g. plastic bags, etc.)
- (2) Important and unique documents.
- (3) Items with a thickness of more than 0.5mm (inclusive of the laminating pouch).
- (4) Items that will discolor or deteriorate after heating such as heat-sensitive paper and the paper with patterns drawn with crayons

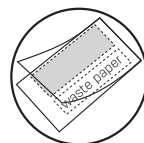


when the laminating film doesn't fit: figure A

3. Laminating Guide


Please DO NOT operate as below:

 - (1) Place the open end of the pouch into the machine.
- (2) Place the pouch into the machine at an angle.
- (3) Put the item to be laminated into an inappropriate sized pouch, and leave too much space around your contents.
- (4) The original items to be laminated are undulating or curled.
- (5) Two consecutive pouches are connected together.
- (6) Cut the pouch before use.
- (7) Use deformed laminating pouches.
- (8) The length of the item to be laminated is less than 65mm.

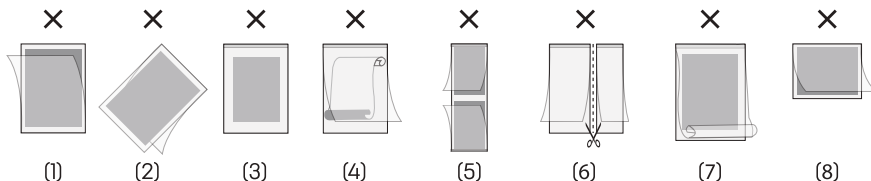

4. Product Diagram

 - ① PAPERWEIGHT;
- ② PATH OF BLADE;
- ③ THE BLADE WITH THREE
- ④ MODE SWITCH;
- ⑤ WORK STATUS INDICATOR;
- ⑥ POWER INDICATOR;
- ⑦ POUCH INLET.

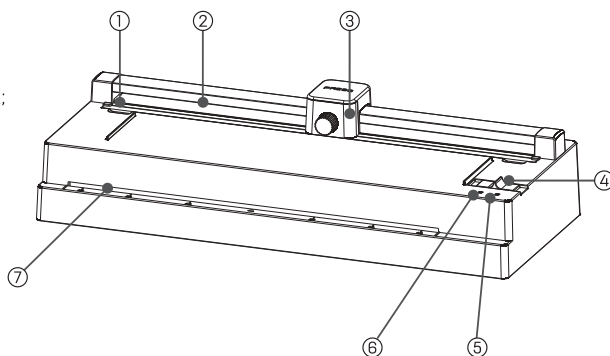

5. Laminating Guide

1. Power on: Connect the power cord, turn on the power on switch, and the power light will be lighted into red color.
2. Hot laminating: please use hot laminating pouch in 70 to 125 mic.
 - >The machine will be warm up about 5 minutes, when the indicator turn into green, it shows that the machine is ready for laminating.
 - >If you mistake input the file and want to exit it, press the release key, and pull the laminating pouch from inlet side.
3. Cold laminating: please use cold laminating pouch in this mode.
 - >If you want to use cold laminating after power on the machine, only need to turn the switch into "COLD" position, and you can use the machine.
 - >If you want to use cold laminating after hot laminating, and you need to turn the switch into "COLD" position, then wait it to cool down, you can use it when the indicator turn into green.
4. Power off: When you finish laminating and want to power off the machine, we suggest you to turn the switch into cold laminating mode, waiting for cooling down the machine in 5 to 10 minutes, then you can shut off the power switch and power cord.
5. Paper cutting: Pulling out and rotating knob, choose the cutting mode you want: straight line—, broken line_ _ _ _ _ , wave line~~~~~. Press the paper by paperweight, then one hand press paper, another hand press the blade, and cutting the paper in the path. The cutting capacity of blade:3x 70gsm A4 or laminatd paper in 125mic thickness laminating pouch.

Noted: the blade is not professional use blade, its cutting torolance is about $\pm 2\text{mm}$. If you have high requirement of precise cutting, suggest you use the professional use cutting machine.

6. Maintenance

1. Cleaning rubber roller: after long-term use of the machine, molten plastic residue will be stuck on the rubber roller, which will easily cause the laminating pouch to get stuck in the machine. In addition, the plastic residue will be difficult to remove once solidified, so please remove it carefully.
Cleaning steps: please feed medium-thick sheets (such as calendar paper or catalog paper) through the machine without being centered in a pouch, and use hot lamination to laminate it several times.
2. Cleaning of the laminator: Please unplug the machine before cleaning, and gently wipe with a soft cloth slightly dampened with water. Do not use solvents such as gasoline, alcohol or diluent. Never use metal brush, tool brush or shovel to tap the rubber roller, so as to avoid scratching it.
3. Please protect your laminator from dirt with an appropriate dust cover, when it's not in use for an extended period of time.

7. Packing List

#	Name	Quantity	Remark
1	Laminator	1X	
2	User Manual	1X	
3	Round Corner Cutter	1X	

8. Technical Parameters

No	T110
Maximum laminating width	320mm
Power	370W
Voltage	230V~/50Hz
Maximum thickness	≤0.5mm
Laminating speed	250mm/min
Warm up time	5 min
Product Dimensions	423mm×178mm×100mm

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
3. No free of charge repair service shall be provided in the event of any of the following circumstances:
 - (1) Expiration of the warranty period;
 - (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
 - (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
 - (4) Failure or damage caused by force majeure;
 - (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: _____ Y _____ M _____ D

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

This copy shall be cut along the dotted line and kept by the dealer.

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

CERTIFICATE

Inspector: _____

Date of Manufacture: _____

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com



**KEEP FOR
FUTURE USE**

Version: 1.0
Date: 01-2025