 


deli

# USER MANUAL

Digital safe

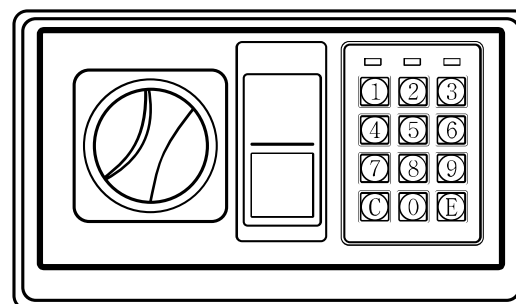

T510

## DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County  
Ningbo 315600 China Made in China  
info@nbdell.com www.deliworld.com



KEEP FOR  
FUTURE USE

Version: 1.0  
Date: 02-2023

### OPENING YOUR SAFE FOR THE FIRST TIME

- Upon first opening, users should open the safe with the emergency key. The operation in details refers to "opening the safe with the emergency key".
- Remove emergency lock cover, then insert the emergency key, and turn it counterclockwise.
  - Turn the knob (master key) clockwise to open the door.

⚠ CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

### INSERTING THE BATTERIES

 
- Open the door.
- Insert 4 X AA batteries into the battery compartment.
- Under normal condition, if both of the red and the green lights are on at the same time, it means the voltage is low and you should insert new batteries.

⚠ CAUTION: Replace 4 fresh batteries by lining them up in a manner as indicated by the "+" and "-" signs. When outage for longer than thirty minutes, you should reset the user's code.

### OPENING DOOR

- Input your user's code (3 to 8 digits), each pressing results one buzzer beep and yellow light flashes.
- Press "A" (C / #) or "B" (E / \*) button, the green light will be on.
- Rotate the knob (master key) clockwise and pull outwards within 5 seconds, the door is opened.

⚠ CAUTION: The user preset code "159". Please input the user code again if the yellow light flashes with three buzzer beeps.

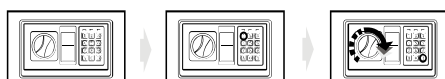

### CLOSING DOOR

- Turn the knob (master key) counter clockwise to close the door.

### AUTOMATIC LOCK

- 3 continuously wrong entries will activate the warning beep for 20 seconds.
- If the door has not been opened with the password, the next 3 continuously wrong entries will activate the warning beep for 5 minutes.

⚠ CAUTION: The key pad would be disabled during the beeping. You can only stop the beeps by opening the safe with emergency key and power-cut by removing the battery.

 
### SETTING THE USER CODE

- With the door open, press the reset button one, start setting code when the yellow lights goes on.
- Input new code (3-8 digits), and press the "A" (C / #) or "B" (E / \*) button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code.
- If the yellow light flashes with 3 buzzer beeps, which means the code changing is not effective, and you need to try again.

### OPENING THE SAFE WITH THE EMERGENCY KEY

Upon first receipt of the safe, or either the electronic circuit malfunction or codes unknown. You could also use the emergency key to open the safe.

- Remove the cover of the emergency lock.
- Insert the emergency key, turn it counterclockwise, then turn the knob (master key) clockwise to open the door.

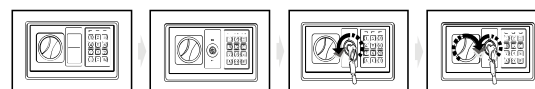


## MOUNTING METHOD

Fix the safe in the place which is not easy to move.

- Drill holes for expansion bolts (or clamping screws) in the right place.
- Turn the expansion bolts counter clockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten all screws.

 ⚠ **CAUTION:** Use the expansion bolt when there is a concrete wall surface. Use the clamping screw when there is a wooden wall surface.

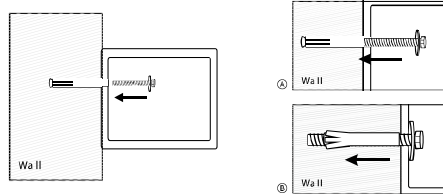

For any help, kindly consult the local distributor

## INTELLIGENT ELECTRONIC SAFE


⚠ **Please do not keep emergency keys in your safe!**

**Dear valued customer:**


Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, thank you for choosing our products!

Schematic drawing of case

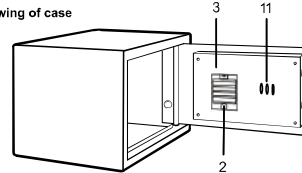 

Schematic drawing of control panel

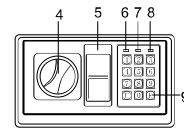 

- |                        |                         |  |
|------------------------|-------------------------|--|
| 1. Bolts               | 5. Emergency Lock Cover | 9. Confirming button                         |
| 2. Reset Button        | 6. Green Light          | 10. Power supply: 4 X AA batteries (include) |
| 3. Battery Compartment | 7. Red Light            | 11. Storage hooks (NOT for override keys)    |
| 4. Knob (Master Key)   | 8. Yellow Light         |  |

⚠ **CAUTION:** All drawings in this manual have been prepared based on the EA. The exterior design or component positions of other models may be different from what is indicated in the drawings, while the operation is the same.

## WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

### Warranty terms:

- For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
- Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
- No free of charge repair service shall be provided in the event of any of the following circumstances:
  - (1) Expiration of the warranty period;
  - (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
  - (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
  - (4) Failure or damage caused by force majeure;
  - (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: \_\_\_\_ Y \_\_\_\_ M \_\_\_\_ D

## WARRANTY CARD

Product Information	Product Name			Serial Number		
	Product Model Number			Manufacturing Date		
Customer Information	Company Name				Contact	
	Address				Phone	
Sales Information	Dealer Name				Contact	
	Address				Phone	
	Date of Purchase				Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date	

This copy shall be cut along the dotted line and kept by the dealer.

## WARRANTY CARD

Product Information	Product Name			Serial Number		
	Product Model Number			Manufacturing Date		
Customer Information	Company Name				Contact	
	Address				Phone	
Sales Information	Dealer Name				Contact	
	Address				Phone	
	Date of Purchase				Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date	