

Item  
number: \_\_\_\_\_

Number: \_\_\_\_\_

# **DELI GROUP CO., LTD.**

301 Xuxiaoke Ave. Ninghai County  
Ningbo 315600 China    Made in China  
info@nbdeli.com    www.deliworld.com




**KEEP FOR  
FUTURE USE**

Version: 1.0  
Date: 02-2023

**deli**

# **USER MANUAL**

Digital safe

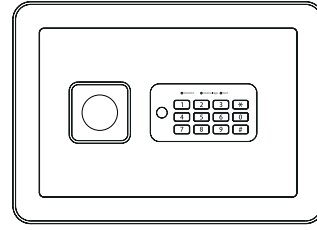

T531/T533/T534/T535

Thank you for choosing Deli . Please read  
this instruction carefully and follow it  
before operating the safe.

## **DIRECTORY**

|   |    |
|---|----|
| Product unpacking.....                          | 01 |
| Product diagram .....                           | 02 |
| First use .....                                 | 03 |
| Battery loading .....                           | 03 |
| Password setting .....                          | 03 |
| Open door operation .....                       | 04 |
| Closing operation.....                          | 04 |
| Replace the battery.....                        | 04 |
| Emergency opening.....                          | 04 |
| Product installation.....                       | 05 |
| Precautions for use .....                       | 06 |
| Common faults and troubleshooting methods ..... | 07 |

DELI GROUP

## **Product unpacking**

After unpacking the package, check whether the product appearance is intact and check all accessories. If there is any defect, please contact the dealer!



Manual 1 copy



2 emergency  
keys



Expansion bolts  
2 sets



4\*AA Batteries

DELI GROUP

## **WARRANTY CARD**


|                      |                            |                     |                    |                                  |                  |
|----------------------|----------------------------|---------------------|--------------------|----------------------------------|------------------|
| Product Information  | Product Name               | Serial Number       |                    |                                  |                  |
|                      | Product Model Number       | Manufacturing Date  |                    |                                  |                  |
| Customer Information | Company Name               |                     |                    | Contact                          |                  |
|                      | Address                    |                     |                    | Phone                            |                  |
| Sales Information    | Dealer Name                |                     |                    | Contact                          |                  |
|                      | Address                    |                     |                    | Phone                            |                  |
|                      | Date of Purchase           |                     |                    | Invoice No.                      |                  |
| Maintenance Record   | Description of Malfunction | Maintenance Results | Customer Signature | Maintenance Technician Signature | Maintenance Date |
|                      |                            |                     |                    |                                  |                  |
|                      |                            |                     |                    |                                  |                  |

This copy shall be cut along the dotted line and kept by the dealer.

## WARRANTY CARD

|                      |                            |                     |                    |                                  |
|----------------------|----------------------------|---------------------|--------------------|----------------------------------|
| Product Information  | Product Name               |                     | Serial Number      |                                  |
|                      | Product Model Number       |                     | Manufacturing Date |                                  |
| Customer Information | Company Name               |                     | Contact            |                                  |
|                      | Address                    |                     | Phone              |                                  |
| Sales Information    | Dealer Name                |                     | Contact            |                                  |
|                      | Address                    |                     | Phone              |                                  |
|                      | Date of Purchase           |                     | Invoice No.        |                                  |
| Maintenance Record   | Description of Malfunction | Maintenance Results | Customer Signature | Maintenance Technician Signature |
|                      |                            |                     |                    |                                  |
|                      |                            |                     |                    |                                  |

## Product diagram

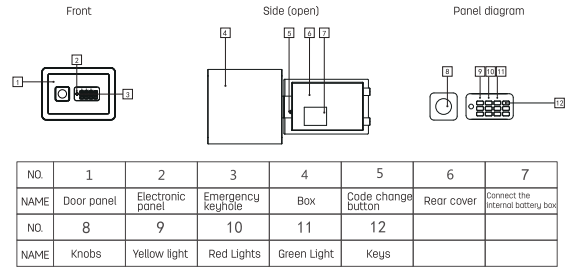

## First use

After placing the box, insert the emergency key and turn it counterclockwise. Then turn the knob clockwise to open the door.  
Special tip: Do not store the emergency key in the box, but in another safe place. In case the product fails, the emergency key can be used to open the door.

## Battery loading

The battery case is located behind the door. Push away the battery box cover and load the 4\*AA batteries correctly according to the polarity.

## Password setting

The factory password is 159. For safety, please set your personal password in time. Press the code change button located in the back cover of the door, the buzzer beeps twice, yellow indicator light; Press the number key to enter 3-8-bit code; Press "\*" key to confirm, the buzzer beeps twice, yellow light off, password setting successful.

## WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

## Warranty terms:

- For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
- Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
- No free of charge repair service shall be provided in the event of any of the following circumstances:

- (1) Expiration of the warranty period;
- (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
- (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
- (4) Failure or damage caused by force majeure;
- (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: \_\_\_\_ Y \_\_\_\_ M \_\_\_\_ D

## Common faults and troubleshooting methods

| Fault phenomenon   | Cause of failure   | Elimination method  |
|--|--|---|
| No response is received when the password is entered numerically           | Battery dead   | Use the emergency key to open the electronic combination lock and replace the battery |
|  | Battery polarity is reversed   | Load the battery correctly  |
|  | Circuit board fault  | Please contact the maintenance department   |
| The emergency key cannot be inserted or removed                            | There's a foreign object in the keyhole  | Remove foreign bodies from keyholes   |
|  | The key is not turned to the limit   | Please reinsert in the correct way  |
| The electronic combination lock has been opened. The door cannot be opened | After turning the handle for more than 7 seconds, the electronic lock is reset | Re-enter the password and turn to the limit in 6 seconds                              |
| Alarm does not go off  | Battery dead   | Please replace the battery  |
|  | Battery polarity is reversed   | Load the battery correctly  |

## Open door operation

Enter the correct password, press "\*" button to confirm, the buzzer beeps twice, green light, please turn the knob within 5 seconds to open the door. If you enter incorrect passwords for three consecutive times, the user will be locked out for 20 seconds. If you enter incorrect passwords for three consecutive times after 20 seconds, the user will be locked out for five minutes.

## Closing operation

Close the door and turn the knob counterclockwise to lock the door.

## Replace the battery

After entering the password, press the "\*" key to confirm. When the green light shines, the red indicator lights up at the same time. In this case, the buzzer sounded five times in succession, indicating that the battery voltage is insufficient, please replace the battery with a new one.

 
## Emergency opening

Emergency keys can be used to open doors in cases where electronic codes cannot be opened. The operation method is the same as "first open door".

## Product installation

The product has 2 mounting holes in the back and is secured to a solid concrete wall with included expansion bolts.

Installation diagram



## Precautions for use

Keep away from direct sunlight and heat sources to prevent the product from falling from high altitude. Keep it in a safe place. If you do not use the product for a long time, please take out the battery to prevent leakage from damaging the electronic system. This product is a safe deposit box, please do not store excessive cash and special valuables.