


deli

USER MANUAL

 
Thermal label printer

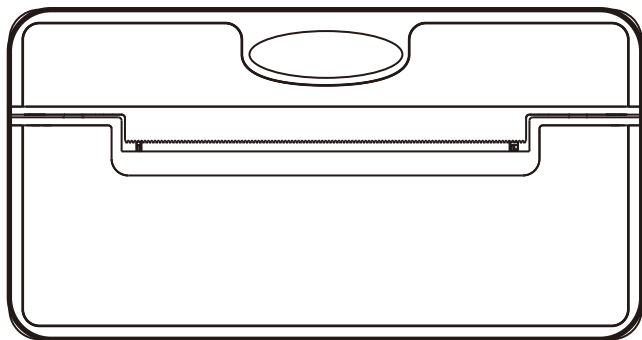


S341/S341W

1 Packing List


Please check if the product is intact after unpacking and verify that all the accessories have been received. If any items are missing, please contact your dealer.




Printer

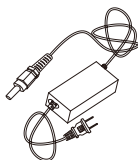

Power Adapter

 

USB Cable

 

User Manual

Caution:

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take appropriate measures.

Note:


1. Please visit Deli official website (www.delioa.com) to download the drivers and the editing software.
2. Please use the "First Sheet Rewind" function indoors without direct sunlight.

It is recommended to disable the "First Sheet Rewind" function in Settings in bright light conditions.



DeliPrinter APP

2 Appearance and Components

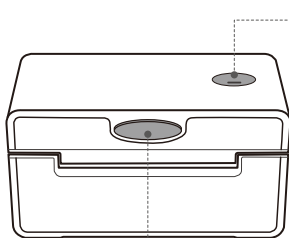


1 Multifunctional Button

- Single click to cancel printing
- Short press twice to print device information
- Long press for 3 seconds to learn the label
If the content printing is offset, try to learn the label
- Long press for 15 seconds to restore factory settings

2 Lid Open Button

- When there is a paper jam or the print head needs to be cleaned, the cover needs to be opened for operation

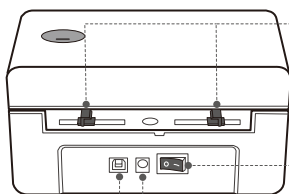

3 Paper Holder

- Avoid the offset of printing paper


4 Power Switch

- Power off
- Power on

5 DC Power Interface

6 USB-D Interface


- Connect to the computer via a USB data cable

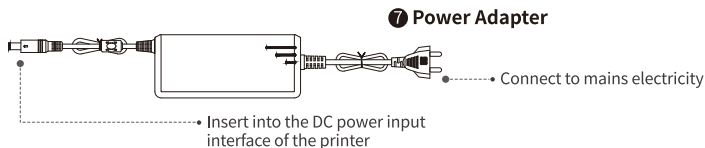


7 Power Adapter

3 Loading the Paper Roll


1. Place a paper roll into the rear of the printer so that it is in the middle of the paper guide.

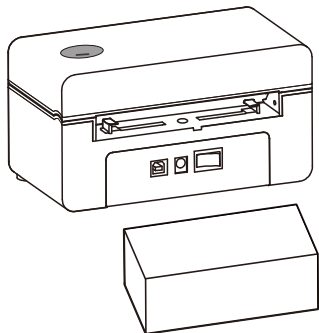


2. Face the front of the printer, press the top cover button in the direction of the arrow, and lift the top cover up.

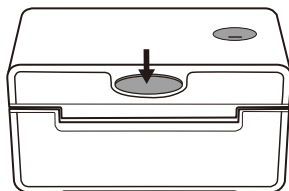

3. Pull out some paper through the paper guide, adjust the paper width guide against both edges to fasten the paper.

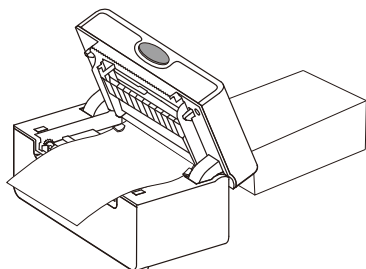


4. Press down the top cover until it clicks shut and tear excess paper in the tear-off direction.

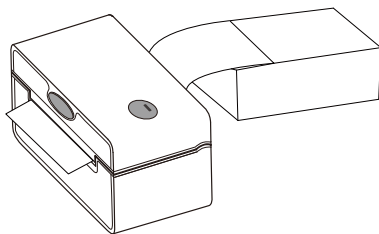


4 Power Connection

1. Make sure that the power switch is at the OFF (O) position.
2. Connect the power adapter to the printer.
3. Connect the other end of the power cord to a nearby outlet.

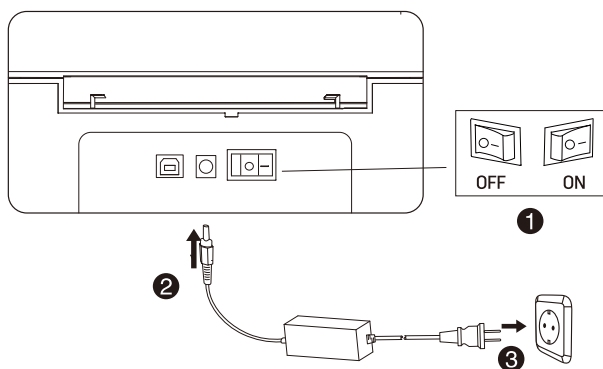

5 Tips

1. For use of paper rolls, we recommend the Deli Waybill Box S15206.
2. We recommend using Deli-brand consumables to protect your print head.

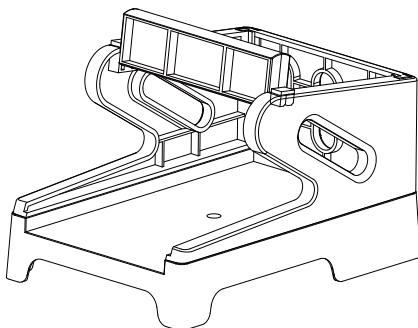

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

- For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
- Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
- No free of charge repair service shall be provided in the event of any of the following circumstances:
 - Expiration of the warranty period;
 - Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
 - Failure or damage resulting from unauthorized disassembly, repair or modification;
 - Failure or damage caused by force majeure;
 - Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase: _____ Y _____ M _____ D

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

This copy shall be cut along the dotted line and kept by the dealer.

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

Special Disclaimer:

While information of this manual has been rigorously checked and reviewed, we still cannot rule out the possibility of spelling mistakes and technical negligence and/or errors. Such negligence and/or errors will be corrected in the updated version(s) without further notice. The intellectual property of this manual belongs to our company, and no organization or individual is allowed to change the content.

-  WARNING: Running this device in a residential environment may cause radio interference.
-  WARNING:Has sharp edges, do not touch.
-  WARNING:Hot parts! Touching the parts will burn your fingers, wait half an hour after turning off the power before touching the parts

CERTIFICATE

Inspector: _____

Date of Manufacture: _____

DELI GROUP CO., LTD.

Deli Industrial Zone, Ninghai County, Ningbo
City, Zhejiang Province, China Made in China
info@nbdeli.com www.delioa.com



**KEEP FOR
FUTURE USE**

Version: 1.0
Date: 06-2026