 


**deli**

# **USER MANUAL**

Paper Shredder

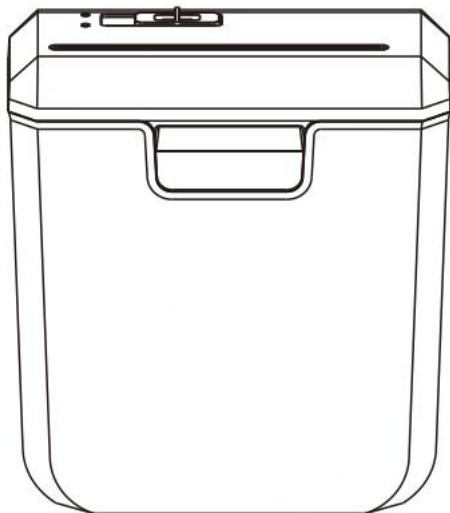

T103SC

Thank you for purchasing our product. This shredder is suitable for personal as well as office department use. We believe the shredding capabilities and confidentiality level of this series of shredders will enable you to dispose your documents in a more efficient manner.

Please read this manual carefully before use, in order to facilitate proper use of this product, as well as to prevent damage to people and property.

## The Table Of Toxic And Hazardous Substances/Elements And Their Content

Part name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr)	Polybrominated biphenyls (PBB)	Polybrominated Dimethyl Ether (PBDE)
Housings	○	○	○	○	○	○
Wastebasket	○	○	○	○	○	○
Motor	×	○	○	○	○	○
Core	○	○	○	○	○	○
Cables	×	○	○	○	○	○
Circuit board	×	○	○	○	○	○
Print	○	○	○	○	○	○
Packaging materials	○	○	○	○	○	○

This Table is prepared in accordance with the provisions of SJ/T11364.

○: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.

×: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T26572(Due to technical or economic reason, these toxic or hazardous substances cannot be replaced or reduced for now).

## 1. Warnings And Precautions



Please place the shredder on a flat and level surface, to avoid from malfunction caused by tipping over.



Warning! Do not disassemble, modify or repair the machine by yourself in any way, to avoid electric shock or accidental injury.



Warning! Do not touch the plug with wet hands, to avoid electric shock or accidental injury.



Please unplug and turn off the shredder when discarding the shredded objects, moving, or not using the equipment for a while, to avoid a fire or electric shock.



Warning! Do not splash water onto the machine to avoid a fire or electric shock.



Do not use this equipment next to a heater or air condition, in a high temperature and humidity, or dusty place, to avoid a fire or electric shock.



Do not shred tapes, copy papers, fabrics or plastic films, to avoid equipment failure.



Warning! Do not damage or process the power cord or place objects on the power cord, to avoid a fire or electric shock.



In case of smoke, odor or other abnormal conditions, please turn off the power switch immediately and stop using to avoid a fire or electric shock.



Do not use paper shredder if the machine or power cord is damaged, to avoid a fire or electric shock.



Warning! Do not let children use this shredder to avoid accidental injury. (This equipment is installed with sharp blades.)



Warning! Do not touch the blades in the feed and shredded outlet slots.



Warning! Do not allow tie, necklace, sleeves, etc. to get pulling into the feed slot. (If it is accidentally entangled, press and hold the "Reverse" button to remove the object.)



Warning! please do not allow your hair to get pulling into the feed slot. (If it is accidentally entangled, press and hold the "Reverse" button to remove the object.)



Please do not put pins, paper clips, etc. into the feed slot. (If it is accidentally entangled, press and hold the "Reverse" button to remove the object.)



Do not spray any flammable gases into the equipment to avoid a fire.



To refer to text in an accompanying document.



Only suitable for use in indoors.



This appliance bears the WEEE mark (Waste of Electric and Electronic Equipment) signifying that, at the end of its life cycle, it should not be disposed of with household waste, but at a recycling centre. The recycling of waste contributes to the conservation of our environment.



Sharp edges. Do not touch.



Moving parts. Keep away from children and pets, keep body part or hand away from moving parts. Always set to off or unplug when not in use



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

## 2. Packing List

Please check the intact of equipment and inventory all accessories. Please contact the dealer for any defect and/or missing of accessory.

#	Name	Quantity	Remark
1	Paper Shredder	1x	
2	User Manual	1x	

## 3. Product Specification

Item No.	TI039C
Rated voltage	220V~/50Hz
Current(A)	0.48
Shredding type	Strip-cut
Shredding effect (mm)	6mm
Can disc be shredded?	/
Paper shredding capacity (70g, A4) (sheet)	6
Shredding speed (m/min)	2
Paper feed width (mm)	220

Disc feed width (mm)	/
Paper bin volume (L)	10
Device size (mm)	292×142×315
Continuous work time (min)	3

\*Test data from Deli lab, changes of the test environment and tools may cause deviations.

 
## 4. Maintenance

1. Unplug the power cord prior to maintenance;
2. Maintenance is limited to the cleaning of external parts only;
3. When cleaning the external parts, caution must be taken not to drip any water droplets into the interior of the shredder.

Note: When cleaning the outer casing of the shredder, please gently wipe with a soft cloth slightly damped with soapy water or detergent. Caution not to let the cloth enter into the feed slot, and do not use solvents such as gasoline, benzene, paint thinner and detergent.

## 5. Product Diagram

1. OVER HEAT
2. POWER
3. Paper Feed Throat
4. FWD/AUTO/OFF/REV
5. Wastebasket

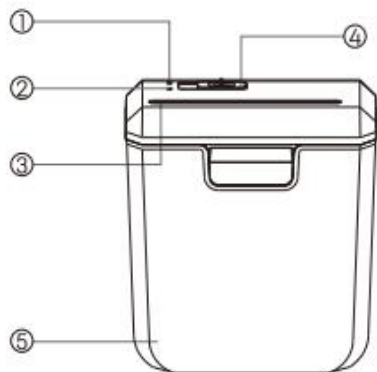


This diagram is for reference only  
 please take the actual product as standard  
 (Shred type varies among different product number)

## 6 Step-by-step Instructions

 ---

1. Switch on the 220V power supply in accordance with the voltage specifications of your equipment.
2. Press the " power " switch button and you may start to use the shredder. Upon the completion of shredding operation, please press the power switch "Off " to turn off the unit.
3. If you want to stop the file being shredded, press the manual eject switch "Reverse" button, the shredder will immediately reverse and eject your file.
4. If a "jam" condition occurs due to excessive amount of paper, press the "Reverse" button to eject the excess paper, then reduce the amount of paper and put them in the feeder again.
5. Shredding excessive amount of paper will result in overheated motor issue, and the shredder will stop automatically (which is the uniquely designed automatic protection function to protect the motor from overheating). After the automatic shutdown, the shredder will resume working after around 60-minutes cool down period.
6. If you want to rescue the file which is shredding, please press the button into "0" position to stop shredding, then cut off the power cord. After that, Connect the power cord after cutting off the paper strip(as the right diagram showed), then press the button into " « " position, one hand press the machine, another hand pull out the paper slightly. If you faced a paper jam, also followed the steps above.

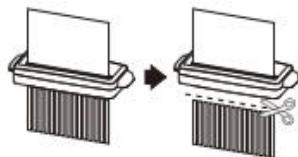

## 7. Troubleshooting

Problem	Potential causes
The equipment is not functioning	The plug is not plugged in,no power
	Voltage of the power is too low
	The equipment is overheated and entered into protection mode due to prolonged use
	Paper is too thin or too soft
	Overload issue has not been resolved
The shredder is stalled	Paper jam

---

## WARRANTY CARD

---

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems. Please contact authorized local dealers or service centers with this receipt and the warranty card.

**Warranty terms:**

1. For product failures occurring under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from the date of purchase.
2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
3. No free of charge repair service shall be provided in the event of any of the following circumstances:
  - (1) Expiration of the warranty period;
  - (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
  - (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
  - (4) Failure or damage caused by force majeure;
  - (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

# WARRANTY CARD

Date of Purchase:    \_\_\_\_ Y    \_\_\_\_ M    \_\_\_\_ D

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Dealer Name		Contact		
	Address		Phone		
	Date of Purchase		Invoice No.		
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

-----

This copy shall be cut along the dotted line and kept by the dealer.

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name		Contact		
	Address		Phone		
Sales Information	Dealer Name		Contact		
	Address		Phone		
	Date of Purchase		Invoice No.		
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

**Special Disclaimer:**

While information of this manual has been rigorously checked and reviewed, we still cannot rule out the possibility of spelling mistakes and technical negligence and/or errors. Such negligence and/or errors will be corrected in the updated version(s) without further notice. The intellectual property of this manual belongs to our company, and no organization or individual is allowed to change the content.

**CERTIFICATE**

Inspector: \_\_\_\_\_

Date of Manufacture: \_\_\_\_\_

**DELI GROUP CO., LTD.**

301 Xuxiake Ave. Ninghai County  
Ningbo 315600 China Made in China  
info@nbdeli.com www.deliworld.com



**KEEP FOR  
FUTURE USE**

Version: 1.0  
Date: 6-2025