


deli

USER MANUAL

Paper Shredder

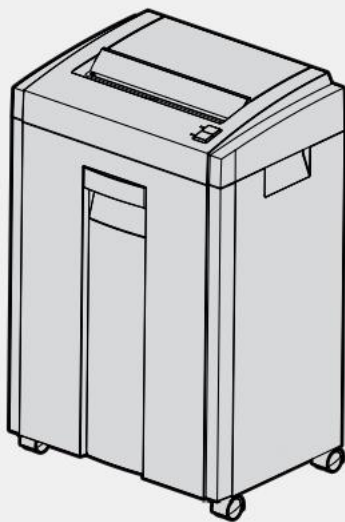

T054-UK

Thank you for purchasing our product. This shredder is suitable for both personal and office use. We believe the shredding capabilities and confidentiality level of this series of shredders will enable you to dispose of your documents in a more efficient manner.

Please read this manual carefully before use, in order to facilitate proper use of this product, as well as to prevent damage to people and property.

1. Warnings And Precautions

The plug on the power supply cord is intended to serve as the disconnect device. The socket-outlet shall be installed near the equipment and shall be easily accessible.

The appliance shall be connected to a MAINS socket outlet with a protective earthing connection.



Please place the shredder on a flat and level surface, to avoid malfunction caused by tipping over.



Warning! Do not disassemble, modify or repair the machine by yourself in any way, to avoid electric shock or accidental injury.



Warning! Do not touch the plug with wet hands, to avoid electric shock or accidental injury.



Please turn off and unplug the shredder when discarding the shredded objects, moving, or not using the equipment for a while, to avoid fire or electric shock.



Warning! Do not splash water onto the machine to avoid a fire or electric shock.



Do not use this equipment next to a heater or air conditioner, in a high temperature and humidity, or dusty place, to avoid a fire or electric shock.



Do not shred tapes, copy paper, fabrics or plastic films, to avoid equipment failure.



Warning! Do not damage or process the power cord or place objects on the power cord, to avoid fire or electric shock.



In case of smoke, odor or other abnormal conditions, please turn off the power switch immediately and stop using to avoid a fire or electric shock.



Do not use the shredder if the machine or power cord is damaged, to avoid a fire or electric shock.



Warning! Do not let children use this shredder to avoid accidental injury. (This equipment is installed with sharp blades.)



Warning! Do not touch the blades in the feed and shredded outlet slots.



Warning! Do not allow tie, necklace, sleeves, etc. to get pulled into the feed slot. (If it is accidentally entangled, switch to "REV" and remove the object)



Warning! Please do not allow your hair to get pulled into the feed slot. (If it is accidentally entangled, switch to "REV" and remove the object)



Please do not put pins, paper clips, etc. into the feed slot. (If it is accidentally entangled, switch to "REV" and remove the object)



Do not spray any flammable gases into the equipment to avoid a fire.



To refer to text in an accompanying document.



Only suitable for use in indoors.



This appliance bears the WEEE mark (Waste Electrical and Electronic Equipment) signifying that, at the end of its life cycle, it should not be disposed of with household waste, but at a recycling centre. The recycling of waste contributes to the conservation of our environment.



Sharp edges. Do not touch.



Moving parts. Keep away from children and pets, keep body part or hand away from moving parts. Always set to off or unplug when not in use.



This equipment is a Class II or double insulated electrical appliance. It does not require an earth ground connection for safety.

2. Packing List

Please check the intactness of equipment and all accessories. Please contact the dealer for any defects and/or missing of accessories.

Item No.	Name	Qty.	Remarks
1	Shredder	1 Unit	
2	Instruction Manual	1 pcs	
3	Caster	4 pcs	

3. Product Technical parameters

Product number	T054-UK
Power supply	230V~/50HZ
Rated current(A)	1.3
Shred type	Micro-cut
Shred size(mm)	2x12
Shred CDs or DVDs	Shreds CDs/DVDs
Shredding capacity (70g, A4) (sheet)	8
Shredding speed (m/min)	1.8
Paper feed slot width(mm)	220
CD/DVD feed slot width(mm)	122
Wastebasket capacity(L)	23
Product dimensions (mm)	350x250x550
Continuous run time (min)	10

* Data above are collected from the test in our lab, Actual performance may vary depending on environment and usage

4. Maintenance

1. Unplug the power cord prior to maintenance;
2. Maintenance is limited to the cleaning of external parts only;
3. When cleaning the external parts, caution must be taken not to drip any water droplets into the interior of the shredder.

Note: When cleaning the outer casing of the shredder, please gently wipe with a soft cloth slightly damped with soapy water or detergent. Caution not to let the cloth enter into the feed slot, and do not use solvents such as gasoline, benzene, paint thinner.

5. Product Diagram

1. Paper feed slot
2. Handle
3. Visible window
4. Wastebasket
5. Power switch button
6. Forward
7. Reverse



This diagram is for reference only please take the actual product as standard (Shred type varies among different product number)

6 Step-by-step Instructions

1. Switch on the 230V power supply in accordance with the voltage specifications of your equipment
2. Press the power switch button "I" on the back of the shredder the indicator will turn green, which means you may start to use the shredder The shredder will stop the shredding process automatically till you activate the next shredding operation. Upon the completion of shredding operation, please press the power switch bottom "O" to turn of the unit.
3. If you want to stop the file being shredded, press the manual eject switch "Reverse" button, the shredder will immediately (2~3 seconds) reverse and eject your file.
4. If a "jam" condition occurs due to excessive amount of paper; the red indicator will prompt the status, and automatically reverse to eject the jammed paper and stop the operation automatically. Once you take out the jammed paper; the indicator will turn green again and will be automatically reactivated by the next shredding operation. If the shredder fails to eject the paper automatically, press the manual "Reverse" button to eject the excess paper If the jammed paper is too short to be removed by hand, you can also use the Torward" button to break the paper to clear the jamming.
5. Shredding excessive amount of paper will result in overheated motor issue, and the shredder will stop automatically (which is the uniquely designed automatic protection function to protect the motor from overheating). After the automatic shutdown, the shredder will resume working after around 60-minutes cool down period.

7. Troubleshooting

Problem	Potential Causes	Solution
The equipment is not functioning.	The plug is not plugged in, no power.	Push the plug into the socket completely.
	Voltage of the power is too low.	Provide rated working voltage.
	The wastebasket has not been pushed into the predetermined position.	Push the wastebasket into the predetermined position.
	The equipment is overheated and entered into protection mode due to prolonged use.	Wait for a while till the equipment is cooled down.
	Paper is too thin or too soft.	Add a thicker paper or fold the paper multiple times to increase the thickness.
	The wastebasket is full.	Empty the wastebasket.
	Overload issue has not been resolved.	Reduce the number of sheets and reload the paper into the feed slot.
The shredder is stalled.	Paper jam.	Turn the "Reverse" button to eject the jammed paper.
The shredder motor will not stop running.	The feed slot is covered with paper dust and other foreign matter.	Clean up the feed slot area.
Operating noise is too loud.	Equipment has been put on hollow or unlevelled floor.	Adjust the placement of the machine.

Note: If there is a malfunction condition that can't be resolved through the above method, please stop using the shredder immediately, unplug the power cord and contact our customer service. Please don't attempt to disassemble the unit by yourself!

8. Recycling

Be sure to send used and waste electronics and packaging materials to a special recycling site to prevent uncontrolled waste disposal and facilitate material recycling.

شكراً لشرائكم منتجنا. ماكينة فرم المستندات هذه مناسبة للاستخدام الشخصي والمكتبي على حد سواء. نحن على ثقة من أن قدرات التمزيق ومستوى السرية التي تتيحها هذه السلسلة من الآلات ستمكنكم من التخلص من مستنداتكم بكفاءة أعلى. يرجى قراءة هذا الدليل بعناية قبل الاستخدام، لتسهيل الاستخدام السليم للمنتج، وكذلك لتجنب إلحاق الضرر بالأشخاص والممتلكات.

1. التحذيرات والإرشادات

القابس الموجود على سلك مصدر الطاقة مُصمَّم ليعمل كجهاز فصل للتيار الكهربائي. يجب تركيب مقبس التيار الكهربائي بالقرب من الجهاز وأن يكون سهل الوصول إليه. يجب توصيل الجهاز بمقبس تيار كهربائي (MAINS) مزود بوصلة تأريض واقية.

يرجى وضع ماكينة فرم المستندات على سطح مستوٍ ومستقر لتجنب الأعطال الناتجة عن انقلبها.



تحذير! لا تقم بتفكيك أو تعديل أو إصلاح الماكينة بنفسك بأي حال من الأحوال لتجنب الصدمات الكهربائية أو الإصابات العرضية.



تحذير! لا تلمس القابس بيدين مبللتين لتجنب الصدمات الكهربائية أو الإصابات العرضية.



يرجى إيقاف تشغيل ماكينة فرم المستندات وفصلها عن التيار الكهربائي عند التخلص من المواد المقطعة أو نقلها أو عدم استخدامها لفترة من الوقت لتجنب نشوب الحريق أو الصدمات الكهربائية.



تحذير! لا ترش الماء على الجهاز تفادياً لنشوب حريق أو حدوث صدمة كهربائية.



لا تستخدم هذا الجهاز بجوار سخان أو مكيف هواء، أو في مكان ذي درجة حرارة ورطوبة عاليتين، أو مكان مترب، لتجنب الحريق أو الصدمات الكهربائية.



لا تقم بتقطيع الأشربة أو ورق النسخ أو الأقمشة أو الأغلفة البلاستيكية لتجنب حدوث عطل في الجهاز.



تحذير! لا تلتف كابل الطاقة أو تضغط عليه أو تضع أي أجسام فوقه، لتجنب الحريق أو الصدمات الكهربائية.



في حالة حدوث دخان أو رائحة أو أي ظروف غير طبيعية أخرى، يرجى إيقاف تشغيل مفتاح الطاقة على الفور والتوقف عن الاستخدام لتجنب الحريق أو الصدمات الكهربائية.



لا تستخدم ماكينة فرم المستندات إذا كان الجهاز أو كابل الطاقة نالماً، لتجنب خطر نشوب الحريق أو الصدمات الكهربائية.



تحذير! لا تسمح للأطفال باستخدام ماكينة فرم المستندات هذه لتجنب الإصابات العرضية. (هذا الجهاز مزود بشفرات حادة).



تحذير! يُرجى عدم لمس الشفرات الموجودة في فتحتي الإدخال ومخرج الورق المُقَطَّع.



تحذير! تجنب سحب فتحة التغذية لرباطات العنق أو القلائد أو الأكمام وما إلى ذلك. (إذا انحسر أي من هذه الأشياء دون قصد، فأغلق الجهاز ثم بدل إلى وضع الرجوع (REV) لإزالته).



تحذير! لا تسمح بسحب شعرك إلى داخل فتحة التغذية. (إذا انحسر أي من هذه الأشياء دون قصد، فأغلق الجهاز ثم بدل إلى وضع الرجوع (REV) لإزالته).



لا ترش أي غازات قابلة للاشتعال داخل الجهاز لتجنب الحريق.



للرجوع إلى النص في وثيقة مرفقة.



مناسب للاستخدام الداخلي فقط.



يحمل هذا الجهاز علامة WEEE (نفايات المعدات الكهربائية والإلكترونية) مما يعني أنه في نهاية دورة حياته، يجب عدم التخلص منه مع النفايات المنزلية، ولكن في مركز إعادة تدوير. تساهم إعادة تدوير النفايات في الحفاظ على بيئتنا.



حواف حادة. ممنوع للمس.



أجزاء متحركة. احفظ الماكينة بعيداً عن متناول الأطفال والحيوانات الأليفة، وأبقِ أجزاء الجسم أو اليدين بعيداً عن الأجزاء المتحركة. اضبط دائماً على وضع الإيقاف أو افصل القابس عند عدم الاستخدام.



هذا الجهاز هو جهاز كهربائي من الفئة الثانية (II) أو مزدوج العزل. لا يتطلب الجهاز توصيلة تأريض لضمان السلامة.



2. قائمة التعبئة والتغليف

يرجى التحقق من سلامة الجهاز وجميع الملحقات عند الاستلام. يرجى الاتصال بالوكيل في حالة وجود أي عيب و/أو نقص في الملحقات.

رقم البند	الاسم	الكمية..	العلامات
1	ماكينة فرم المستندات	1 وحدة	
2	دليل التعليمات	1 قطعة	
3	عجلة	4 قطعة	

3. المعايير التقنية للمنتج

رقم المنتج	T054-UK
مصدر طاقة	230 فولت ~ 50 هرتز
التيار المُقَدَّر (أمبير)	1.3
نوع التقطيع	قي قد ع طقي
حجم التقطيع (ملم)	2x12
أقراص مضغوطة CDs أو أقراص DVD مقطعة	أقراص مضغوطة CDs أو أقراص DVD مقطعة
سعة التقطيع (70 جم، A4) (ورقة)	8
سرعة التقطيع (متر/دقيقة)	1.8
عرض فتحة تغذية الورق (ملم)	220
عرض فتحة تغذية القرص المضغوط / قرص الفيديو الرقمي (ملم)	122
سعة سلة المهملات (لتر)	23
أبعاد المنتج (ملم)	350x250x550
وقت التشغيل المستمر (دقيقة)	10

جُمِعت البيانات أعلاه من الاختبارات التي أُجريت في مختبرنا، وقد يختلف الأداء الفعلي باختلاف بيئة وطريقة الاستخدام.


4. الصيانة

1. افصل سلك التيار الكهربائي قبل إجراء الصيانة؛
2. تقتصر الصيانة على تنظيف الأجزاء الخارجية فقط؛
3. عند تنظيف الأجزاء الخارجية، يجب توخي الحذر لضمان عدم تسرب أي قطرات ماء إلى داخل ماكينة فرم المستندات.

ملحوظة:

عند تنظيف الغلاف الخارجي لماكينة فرم المستندات، يرجى مسحه برفق بقطعة قماش ناعمة مبللة قليلاً بالماء والصابون أو المنظف. احرص على عدم السماح بدخول القماش إلى فتحة التغذية، مع تجنب استخدام المذيبات مثل الغازولين والبنزين ومخفف الطلاء.

5. رسم تخطيطي للمنتج

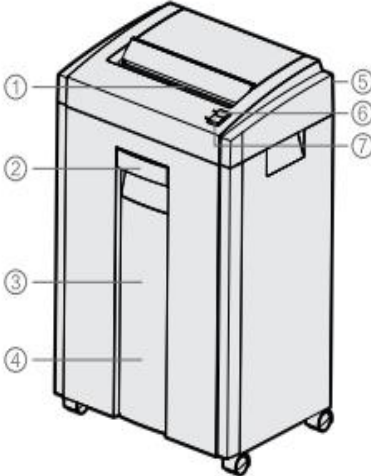

1. فتحة تغذية الورق
2. مقبض
3. نافذة شفافة
4. سلة المهملات
5. زر مفتاح الطاقة
6. التقديم
7. الرجوع للخلف

الصورة للاستخدام المرجعي فقط. ستكون التفاصيل خاضعة للواقع الفعلي (فأرقام العناصر المختلفة لها أشكال مختلفة).

6 التعليمات خطوة بخطوة

قم بتشغيل مصدر الطاقة ذي جهد 230 فولت وفقًا لمواصفات الجهد الكهربائي لجهازك.

اضغط على زر الوضع التلقائي "Auto" لبدء استخدام ماكينة فرم المستندات. ستتوقف الماكينة عن عملية التقطيع تلقائيًا إلى أن تقوم بتشغيل دورة التقطيع التالية. بمجرد الانتهاء من عملية التقطيع، يُرجى الضغط على زر مفتاح الطاقة "Off" ([إيقاف تشغيل]) لإيقاف تشغيل الوحدة.

إذا كنت ترغب في إيقاف تقطيع الملف، فاضغط على مفتاح الإخراج اليدوي، زر "الرجوع للخلف"، وستقوم ماكينة فرم المستندات بالرجوع للخلف على الفور وإخراج ملفك.

في حالة حدوث "انحسار" بسبب وجود كمية زائدة من الورق، اضغط على زر "الرجوع للخلف" لإخراج الورق الزائد ثم قلل كمية الورق وأعد وضعه في وحدة التغذية.

سيؤدي تقطيع كمية زائدة من الورق إلى ارتفاع درجة حرارة المحرك، وستتوقف ماكينة فرم المستندات تلقائيًا (وهي وظيفة الحماية التلقائية المصممة بشكل فريد لحماية المحرك من الحرارة المفرطة). بعد الإغلاق التلقائي، ستستأنف ماكينة فرم المستندات العمل بعد فترة تبريد تستغرق حوالي 60 دقيقة.

يقع جهاز استشعار الصور في منتصف فتحة التغذية. ضع الورق المراد تقطيعه في منتصف فتحة التغذية.

7. استكشاف الأخطاء وإصلاحها

المشكلة	الأسباب المحتملة	الحل
الجهاز لا يعمل.	القابس غير موصول، لا توجد طاقة.	أدخل القابس في المقبس بشكل كامل ومحكم.
	جهد الطاقة منخفض جدًا.	يجب توفير جهد التشغيل المُقدر.
	سلة المهملات غير مثبتة في مكانها المحدد.	ادفع سلة المهملات إلى مكانها الصحيح حتى تثبت في موضعها.
	ارتفعت درجة حرارة الجهاز بشكل مفرط ودخل في وضع الحماية بسبب الاستخدام لفترة طويلة.	انتظر بعض الوقت حتى يبرد الجهاز.
	الورق رقيق جدًا أو ناعم جدًا.	أضف ورقة أكثر سمكًا أو قم بطي الورقة عدة مرات لزيادة سماكتها.
	سلة المهملات ممتلئة.	أفرغ سلة المهملات.
	لم يتم حل مشكلة التحميل الزائد.	قلل عدد الأوراق وأعد إدخالها في فتحة التغذية
توقف ماكينة فرم المستندات عن العمل.	انحشار الورق.	لف زر "الرجوع للخلف" لإخراج الورق المحشور.
توقف ماكينة فرم المستندات عن العمل.	فتحة التغذية مغطاة بغبار الورق ومواد غريبة أخرى.	نظف منطقة فتحة التغذية.
توقف ماكينة فرم المستندات عن العمل.	الجهاز موضوع على أرضية غير مستوية أو مجوفة.	انقل الجهاز إلى سطح مستوي ومستقر.

ملحوظة: إذا استمر العطل ولم يُحل بالطريقة المذكورة أعلاه، يُرجى التوقف عن استخدام ماكينة فرم المستندات فورًا، وفصل كابل الطاقة، والاتصال بخدمة العملاء لدينا، يُحظر محاولة تفكيك الوحدة بنفسك!

8. إعادة التدوير

تأكد من إرسال المواد الإلكترونية المستعملة والنفايات ومواد التعبئة والتغليف إلى موقع إعادة تدوير خاص لمنع التخلص غير المراقب من النفايات وتسهيل إعادة تدوير المواد.

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems. Please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

1. For product failures occurring under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from the date of purchase.
2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
3. No free of charge repair service shall be provided in the event of any of the following circumstances:
 - (1) Expiration of the warranty period;
 - (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
 - (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
 - (4) Failure or damage caused by force majeure;
 - (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

WARRANTY CARD

Date of Purchase: _____ Y _____ M _____ D

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

This copy shall be cut along the dotted line and kept by the dealer.

Product Information	Product Name		Serial Number		
	Product Model Number		Manufacturing Date		
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

Special Disclaimer:

While information of this manual has been rigorously checked and reviewed, we still cannot rule out the possibility of spelling mistakes and technical negligence and/or errors. Such negligence and/or errors will be corrected in the updated version(s) without further notice. The intellectual property of this manual belongs to our company, and no organization or individual is allowed to change the content.

CERTIFICATE

Inspector: _____

Date of Manufacture: _____

DELI GROUP CO., LTD.

301 Xuxiaoke Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com

**KEEP FOR
FUTURE USE**

Version: 1.0
Date: 12-2025